 
 
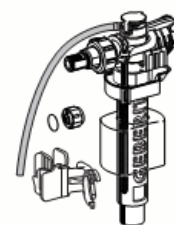 
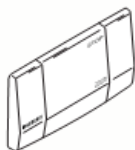 
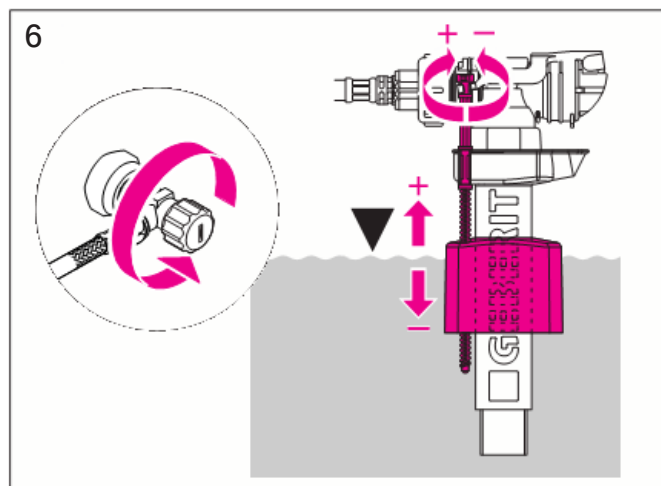 
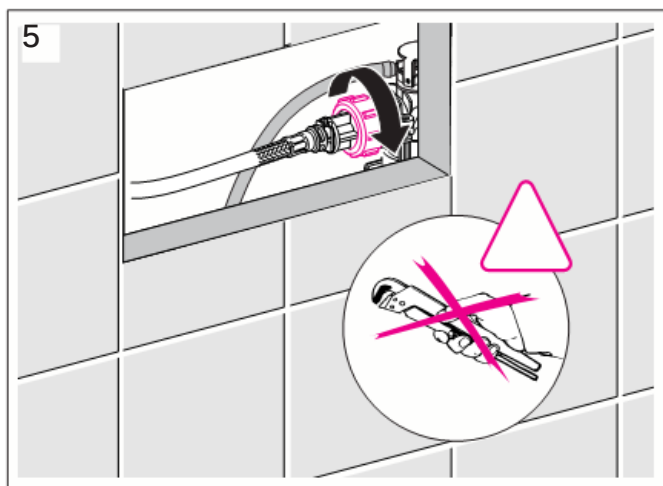 
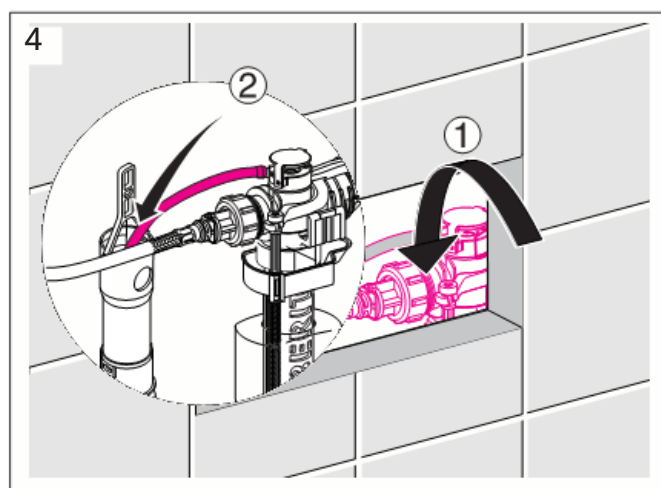 
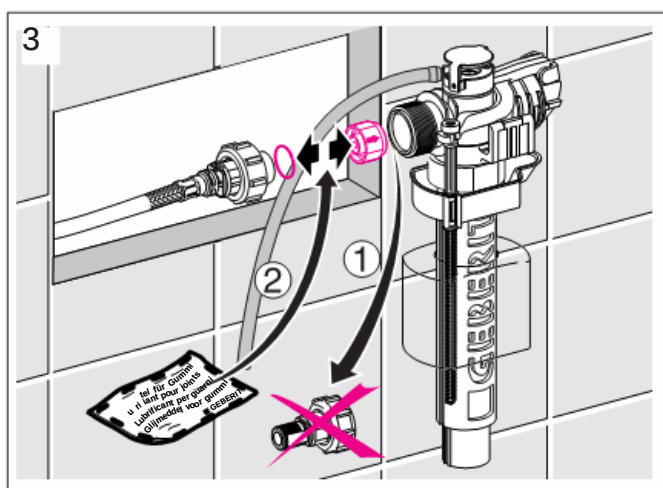 


Installation Instructions 241.470

Tessera
111.816.00.1

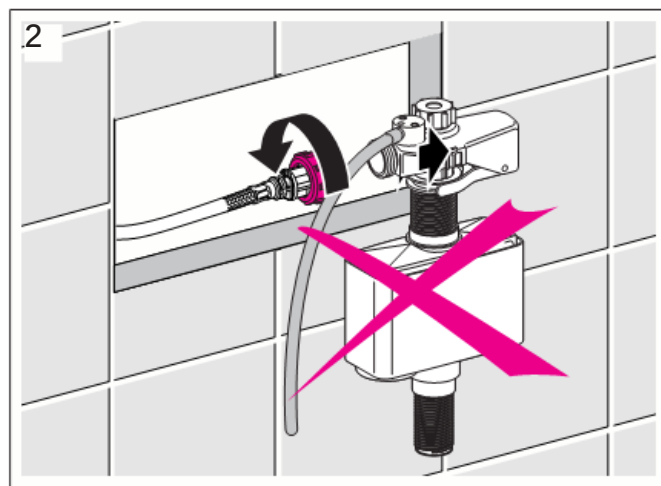

241.470.00.1

 
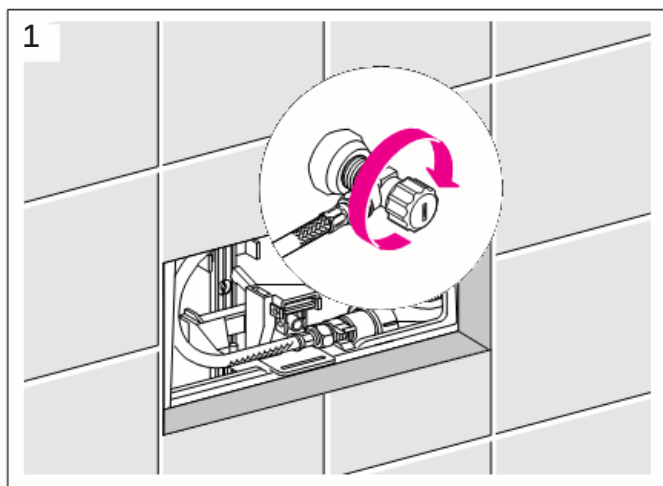 


D9941-002&BDC © 11-2005

964.892.00.0 (00)







Installation Instructions 241.470

Tessera
111.816.00.1

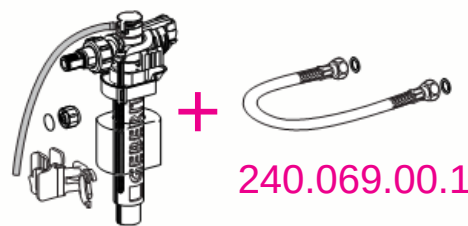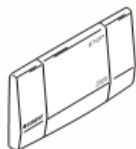

241.470.00.1

     
 
240.069.00.1

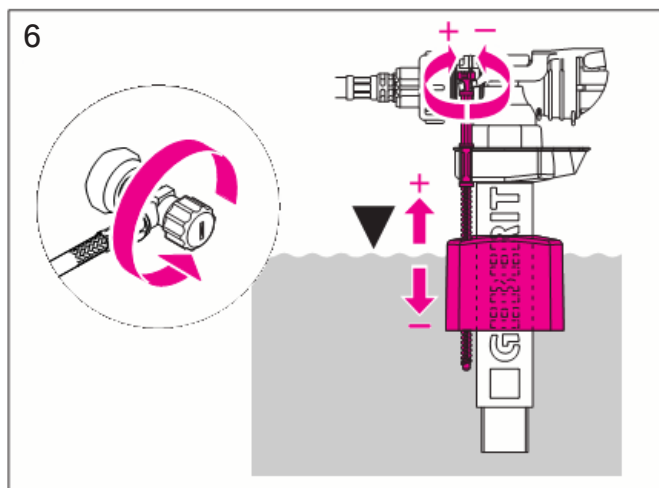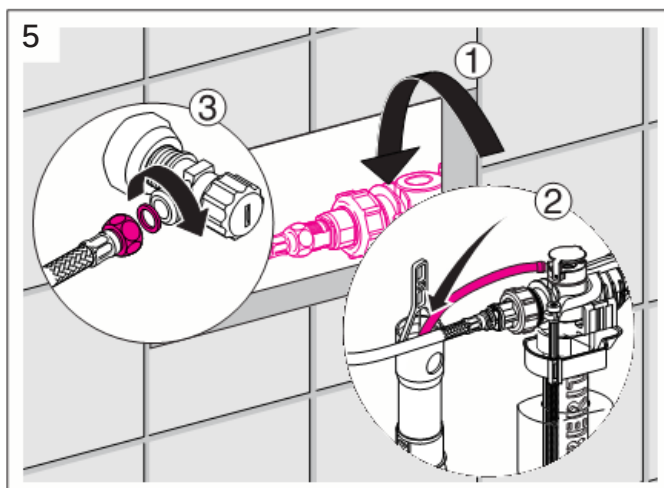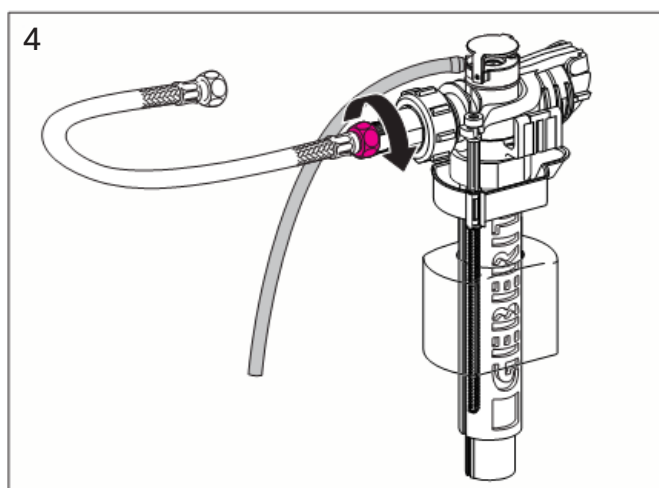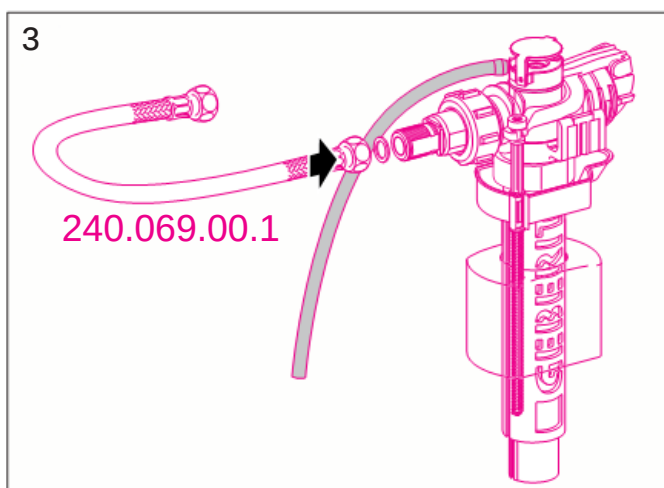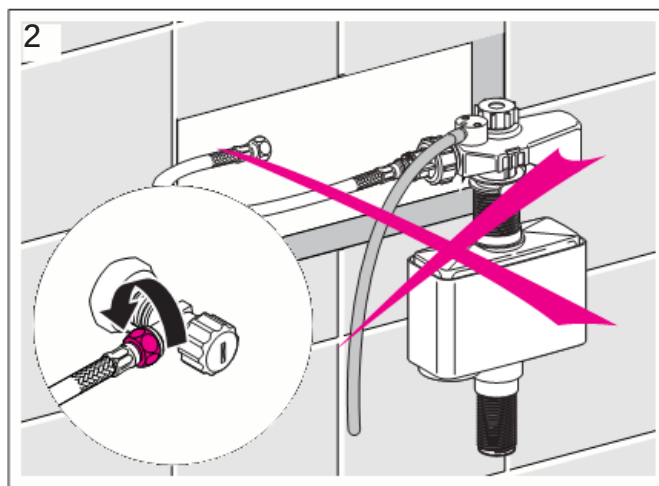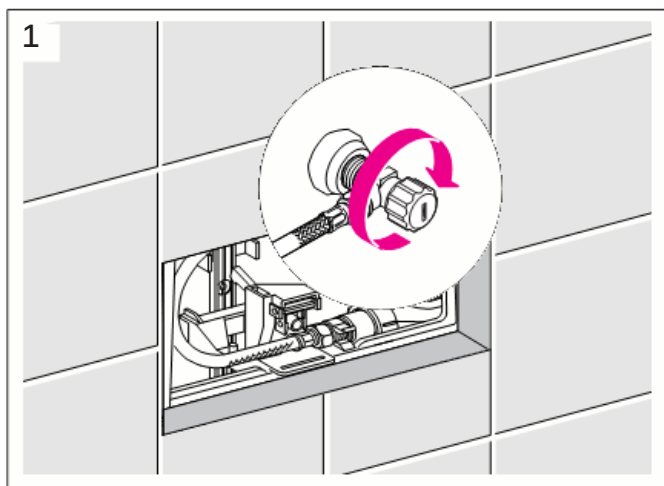







GEBERIT

Installation Instructions 241.470

  Tessera
111.336.00.1

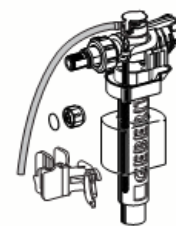

     
 
241.470.00.1

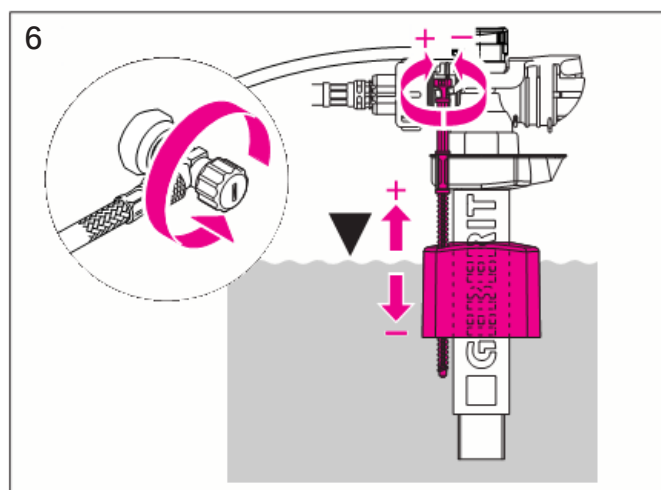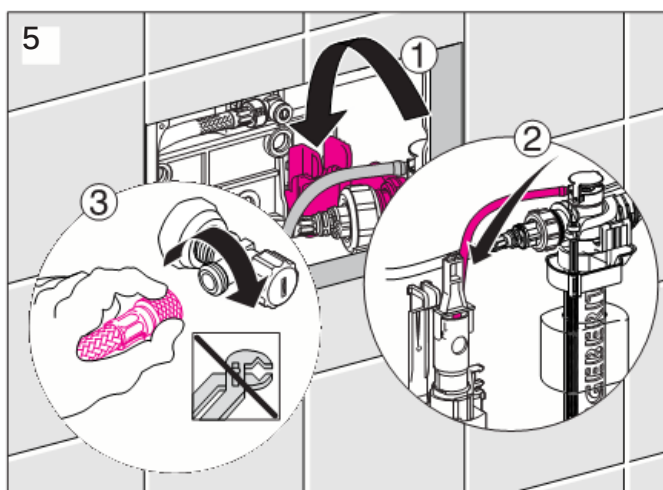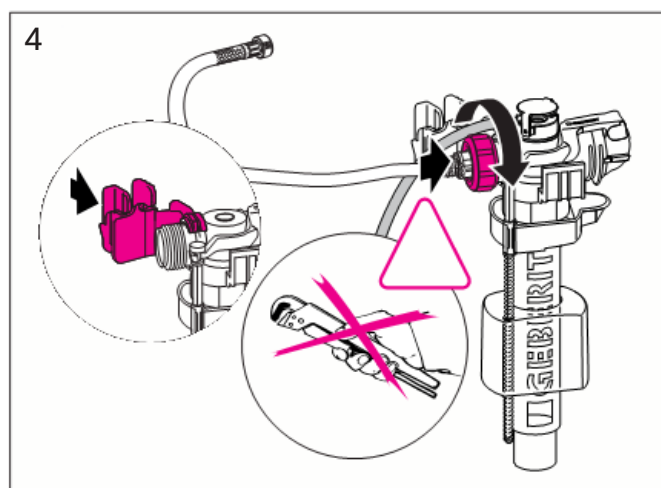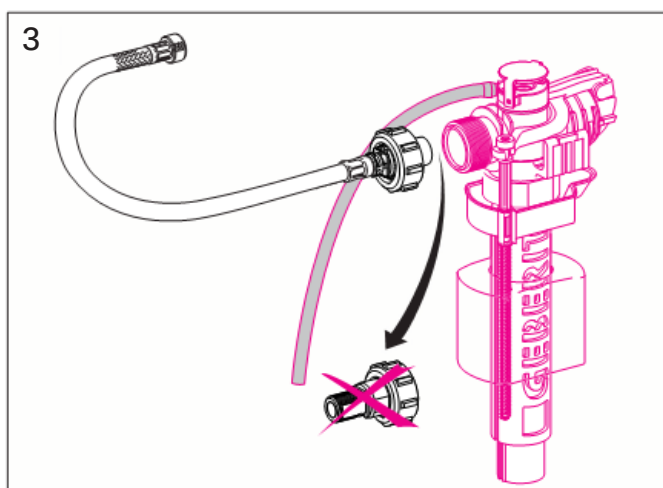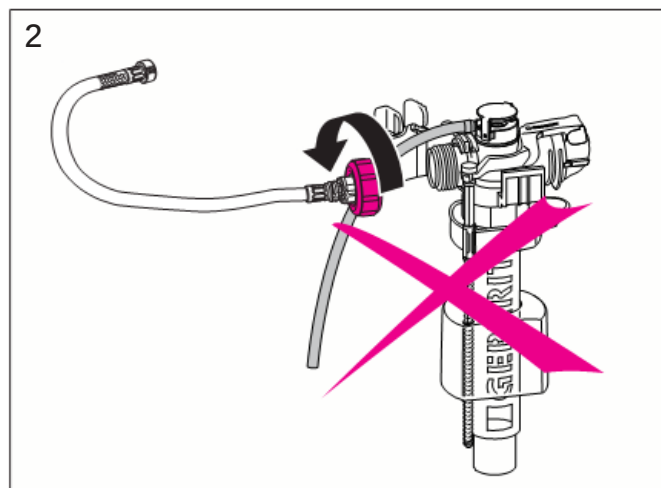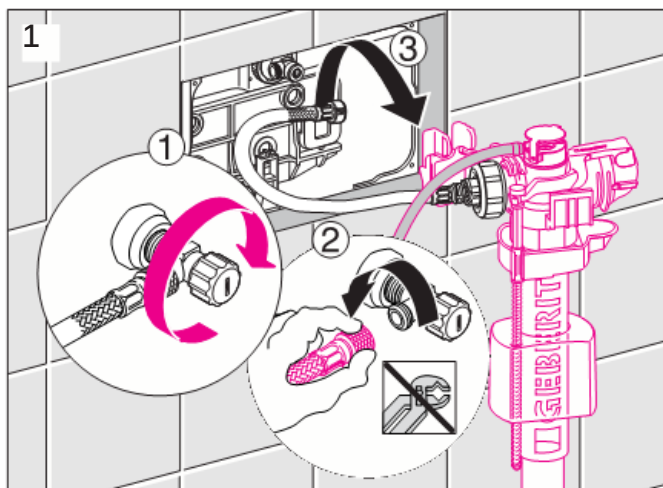

■ GEBERIT







Installation Instructions 241.470

  Tessera
111.336.00.1

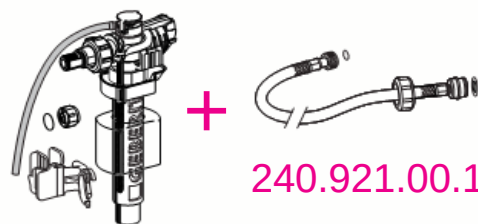

241.470.00.1

      240.921.00.1

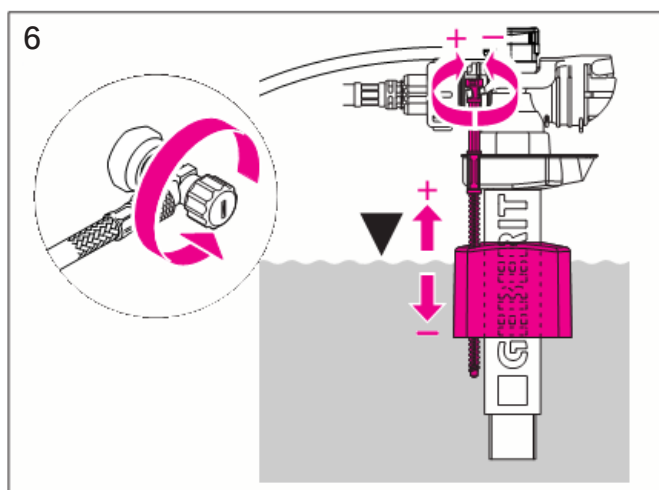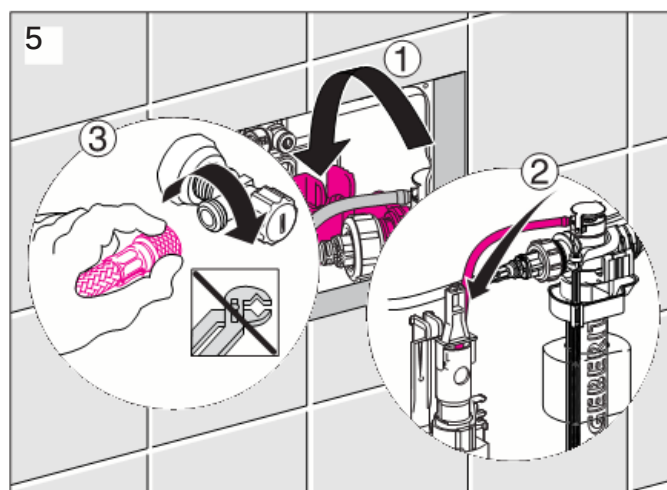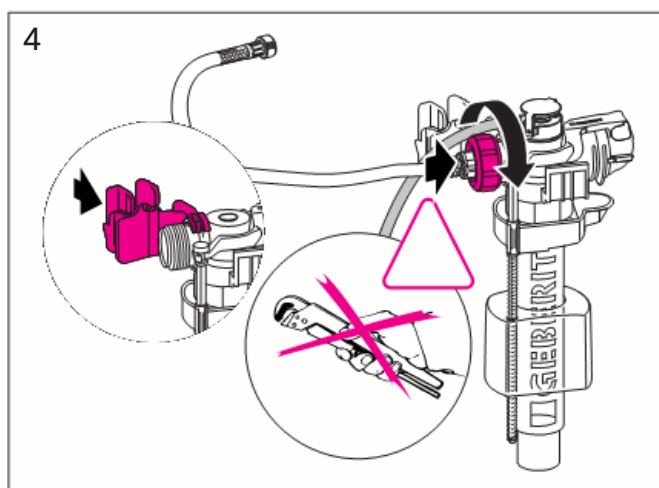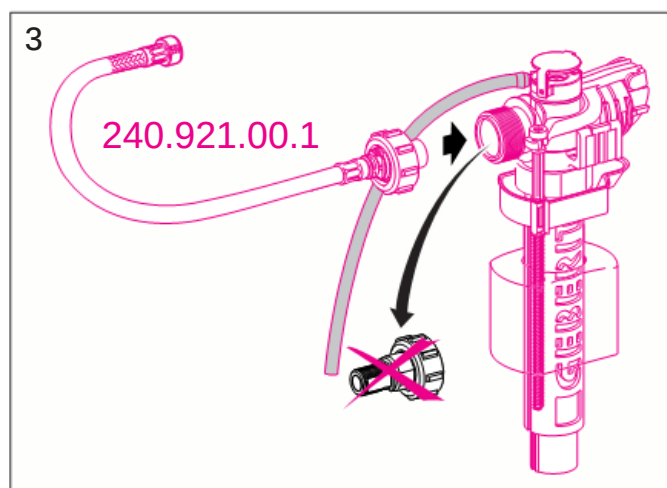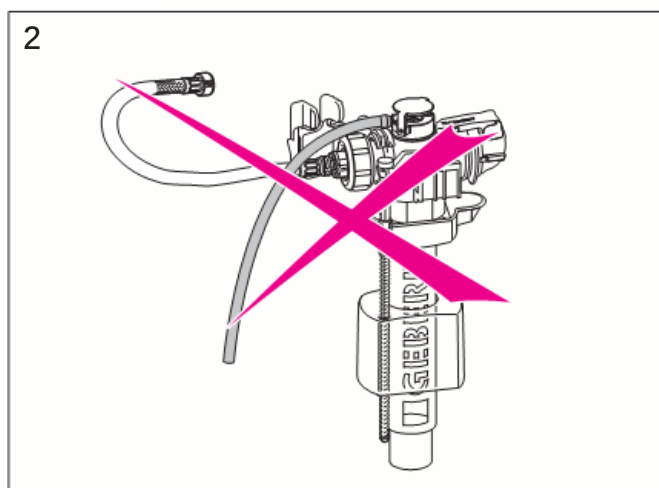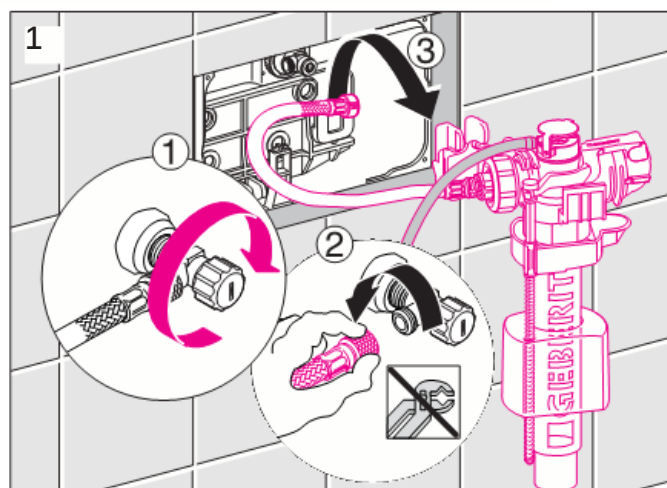

GEBERIT