



EASY PROGRAMMING

Watering on specific days of the week

Note: For "Watering Interval" or "Odd/Even" option, see owners manual

Step 1-Resetting the Timer

Insert 2 AA Batteries and/or connect the transformer to the timer. Press the **RESET** button with a small round tipped object.

Step 2-Set Time/Date

Turn the dial to the **TIME/DATE** position. Set the Current Time, Date, Month, & Year using the **+** or **-** buttons, followed by the **ENTER** button to save each setting.

Step 3-Set Cycle Start Times

Turn the dial to the **CYCLE START TIMES** position. Enter one start time using the **+** or **-** buttons followed by the **ENTER** button. Note: Entering additional start times - If you want your sprinklers to water the same area multiple times a day, please refer to your manual.

Step 4-Set Station Duration

Turn the dial to the **STATION DURATION** position. Enter a duration for each valve or station to be watered using the **+** or **-** buttons followed by the **ENTER** button to save your setting.

Step 5-Set Day of Week

 
Turn the dial to the **WATERING DAYS** position. To select the day(s) of week to water, push the **NEXT** button until the arrow flashes under the desired day and press the **ENTER** button.

Congratulations, your timer is programmed!


 





 


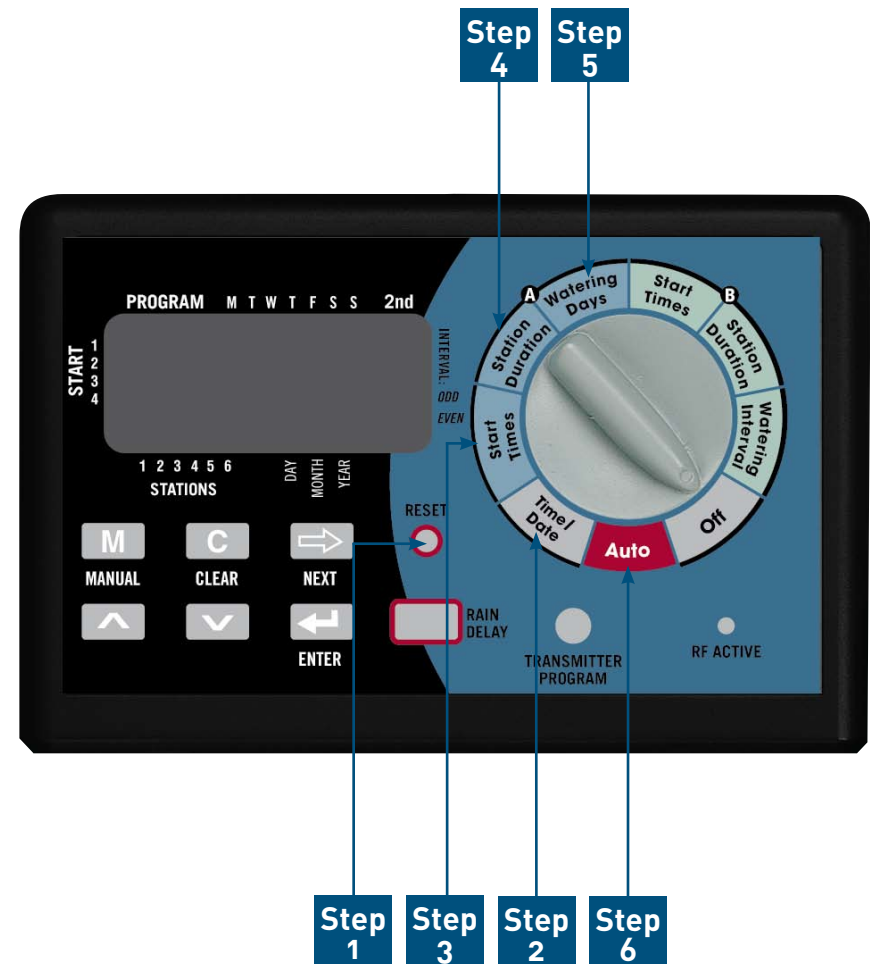


 





To run your program, go to step 6

Step 6-Auto

Turn the rotary dial to the **AUTO** position to run the program.



PN 57096-27 Rev A

 <p>FLUID</p> <p>P 801 295 9820 F 801 951 5815 www.fluid-studio.net 1065 South 500 West Bountiful, Utah 84010</p>	<p>PROOF NO: 2</p> <p>DATE: 10.05.09</p> <p>DES: SM SPCK: LN</p> <p>JOB NO: NA</p> <p>CLIENT: Orbit</p> <p>SKU: 57096</p> <p>UPC: NA</p> <p>FILE NAME: 57096-27 rA.indd</p> <p>SOFTWARE: InDesign CS3</p>	<p>DIMENSIONS: FLAT: W: 11" H: 8.5" FINISHED: W: 11" D: " H: 8.5"</p> <p>COLORS</p> <table border="0"> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td>Registration</td> <td>color non printing</td> <td>color non printing</td> </tr> <tr> <td></td> <td></td> <td></td> </tr> <tr> <td>CMYK</td> <td>PMS ????</td> <td>PMS ????</td> </tr> </table> <p>ADDITIONAL INSTRUCTIONS: · Font sizes cannot be smaller than 7 pt.</p>				Registration	color non printing	color non printing				CMYK	PMS ????	PMS ????	<p>Printers are responsible for meeting print production requirements. Any changes must be approved by the client and Fluid Studio.</p> <p>PRINTED PIECE MUST MEET DESIGNATED SPECIFICATIONS ON THIS FORM.</p> <p>© 2007 Fluid Studio. This work is the property of Fluid Studio, and cannot be used, reproduced or distributed in any way without their express permission.</p>
															
Registration	color non printing	color non printing													
															
CMYK	PMS ????	PMS ????													



PROGRAMACIÓN FÁCIL

Riego en días específicos de la semana

Nota: Para las opciones "Watering interval" (intervalo de riego) o "Odd/Even" (impares/pares) consulte el manual del usuario

Paso 1-Cómo reiniciar el temporizador

Inserte 2 baterías AA y/o conecte el transformador al temporizador. Presione el botón **RESET** con un objeto pequeño de punta redonda.

Paso 2-Configure la hora/fecha

Gire el selector hasta llegar a la posición **TIME/DATE** (HORA/FECHA). Coloque la hora actual, la fecha, mes y año utilizando los botones **+** o **-**, seguidamente pulse el botón **ENTER** para guardar cada configuración.

Paso 3-Configure las horas de inicio del ciclo

Gire el selector al a la posición **CYCLE START TIMES** (horas de inicio del ciclo). Ingrese una hora de inicio utilizando los botones **+** o **-** seguidamente pulse el botón **ENTER**. Nota: Para ingresar horas adicionales de inicio - Si desea que los aspersores rieguen la misma área varias veces al día, refiérase a su manual.

Paso 4-Configurar la duración del riego en la estación

Gire el selector hasta la posición **STATION DURATION** (duración en la estación). Ingrese una duración para cada válvula o estación de riego utilizando los botones **+** o **-**, seguidamente pulse el botón **ENTER** para guardar la configuración.

Paso 5-Configurar el día de la semana

Gire el selector hasta llegar a la posición **WATERING DAYS** (días de riego). Para seleccionar el(los) día(s) de la semana en que desea regar, presione el botón **NEXT** (siguiente) hasta que la flecha destelle bajo el día deseado y presione el botón **ENTER** (ingresar).

¡Felicitaciones, su temporizador está programado!

Para activar el programa, vaya al paso 6

Paso 6-Automático

Gire la esfera a la posición **AUTO** para activar el programa.

