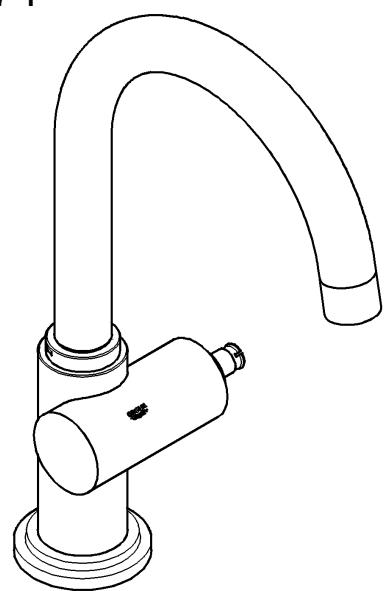
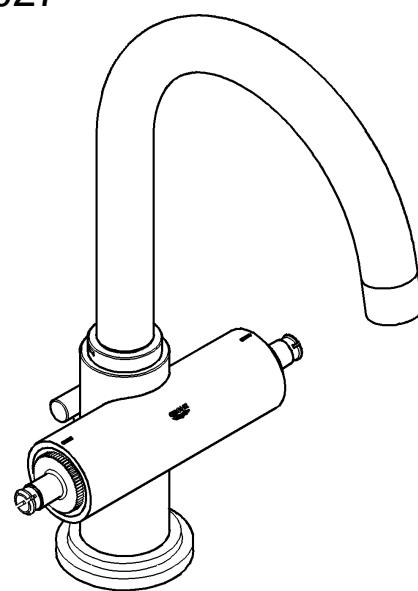



20 074



21 027



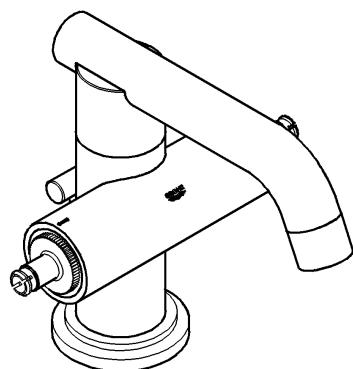21 031



Atrio

## Atrio

English .....1

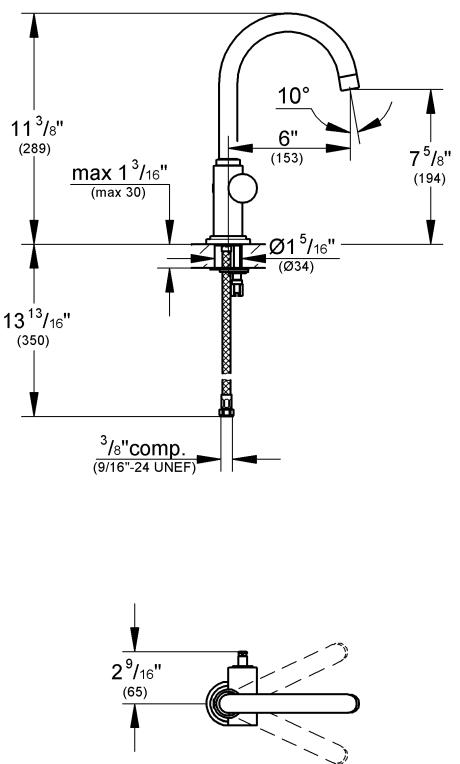
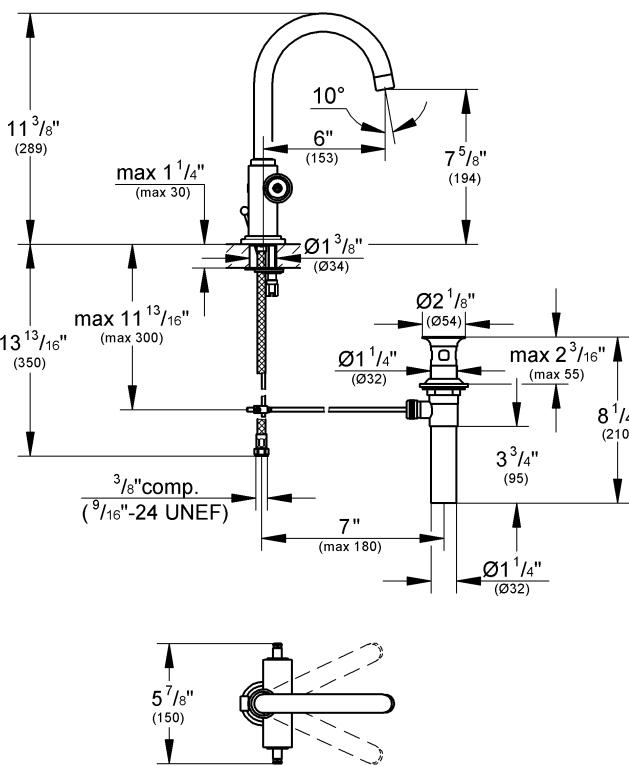
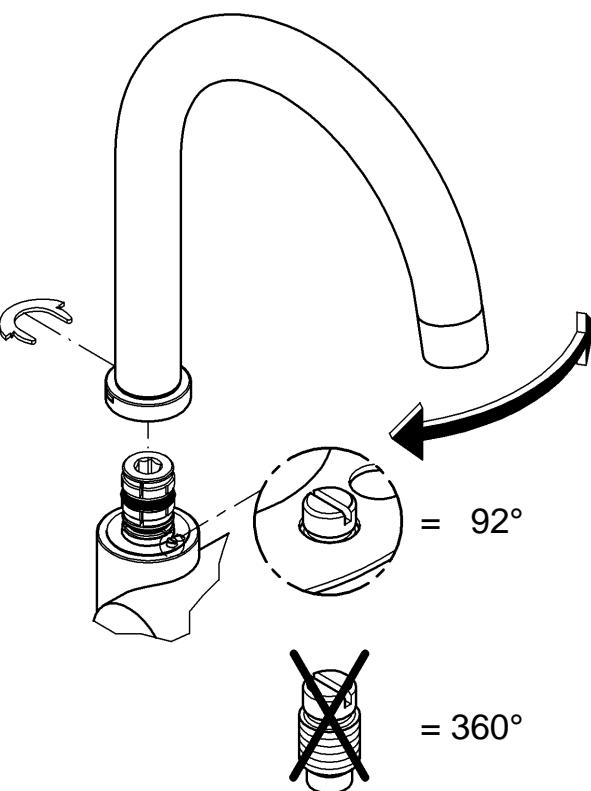
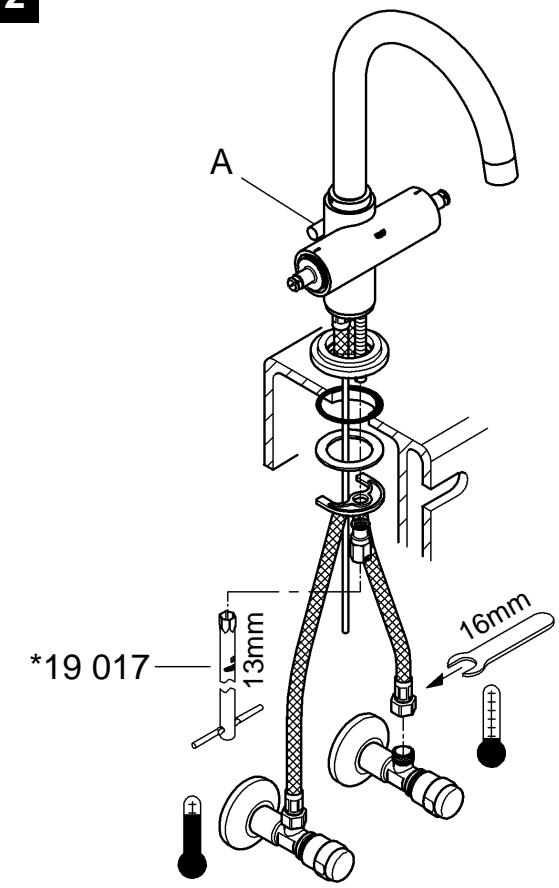
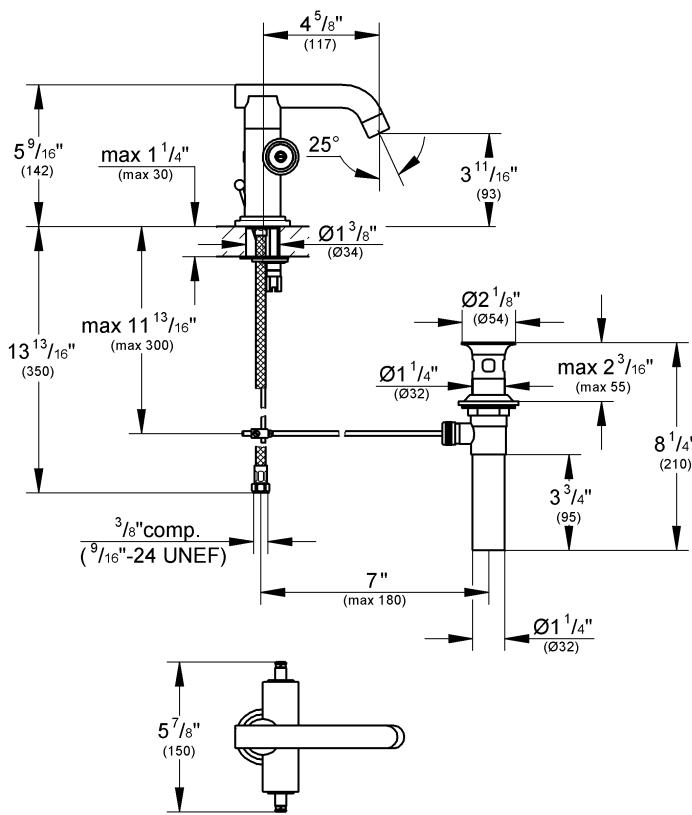
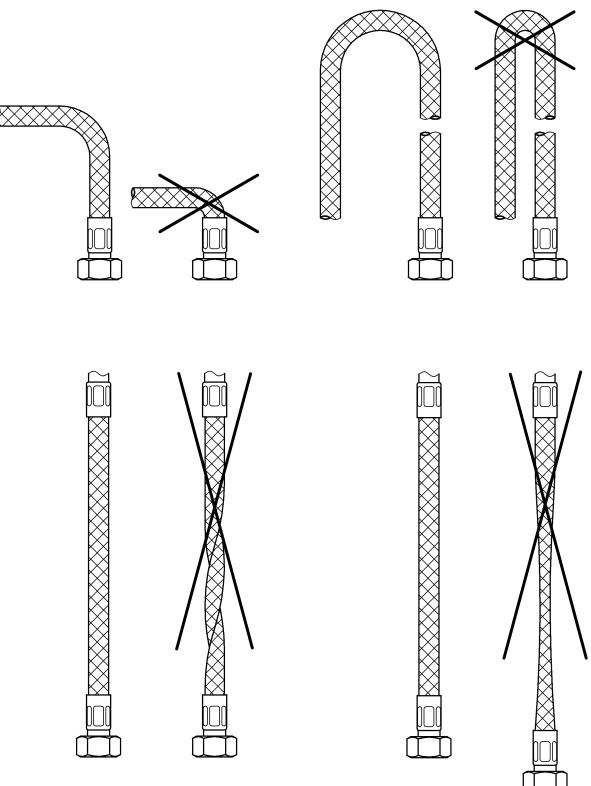
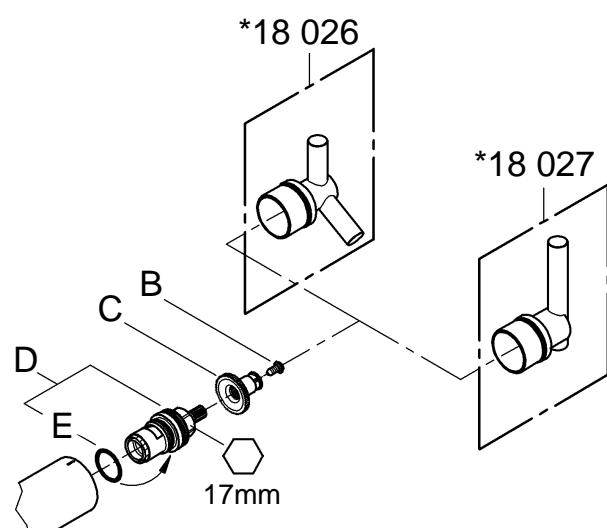
Français .....2

Español .....3


Design & Quality Engineering GROHE Germany

95.978.131/ÄM 212225/11.10

**GROHE**  
ENJOY WATER®

**20 074****21 027****1****2****21 031****3****4**

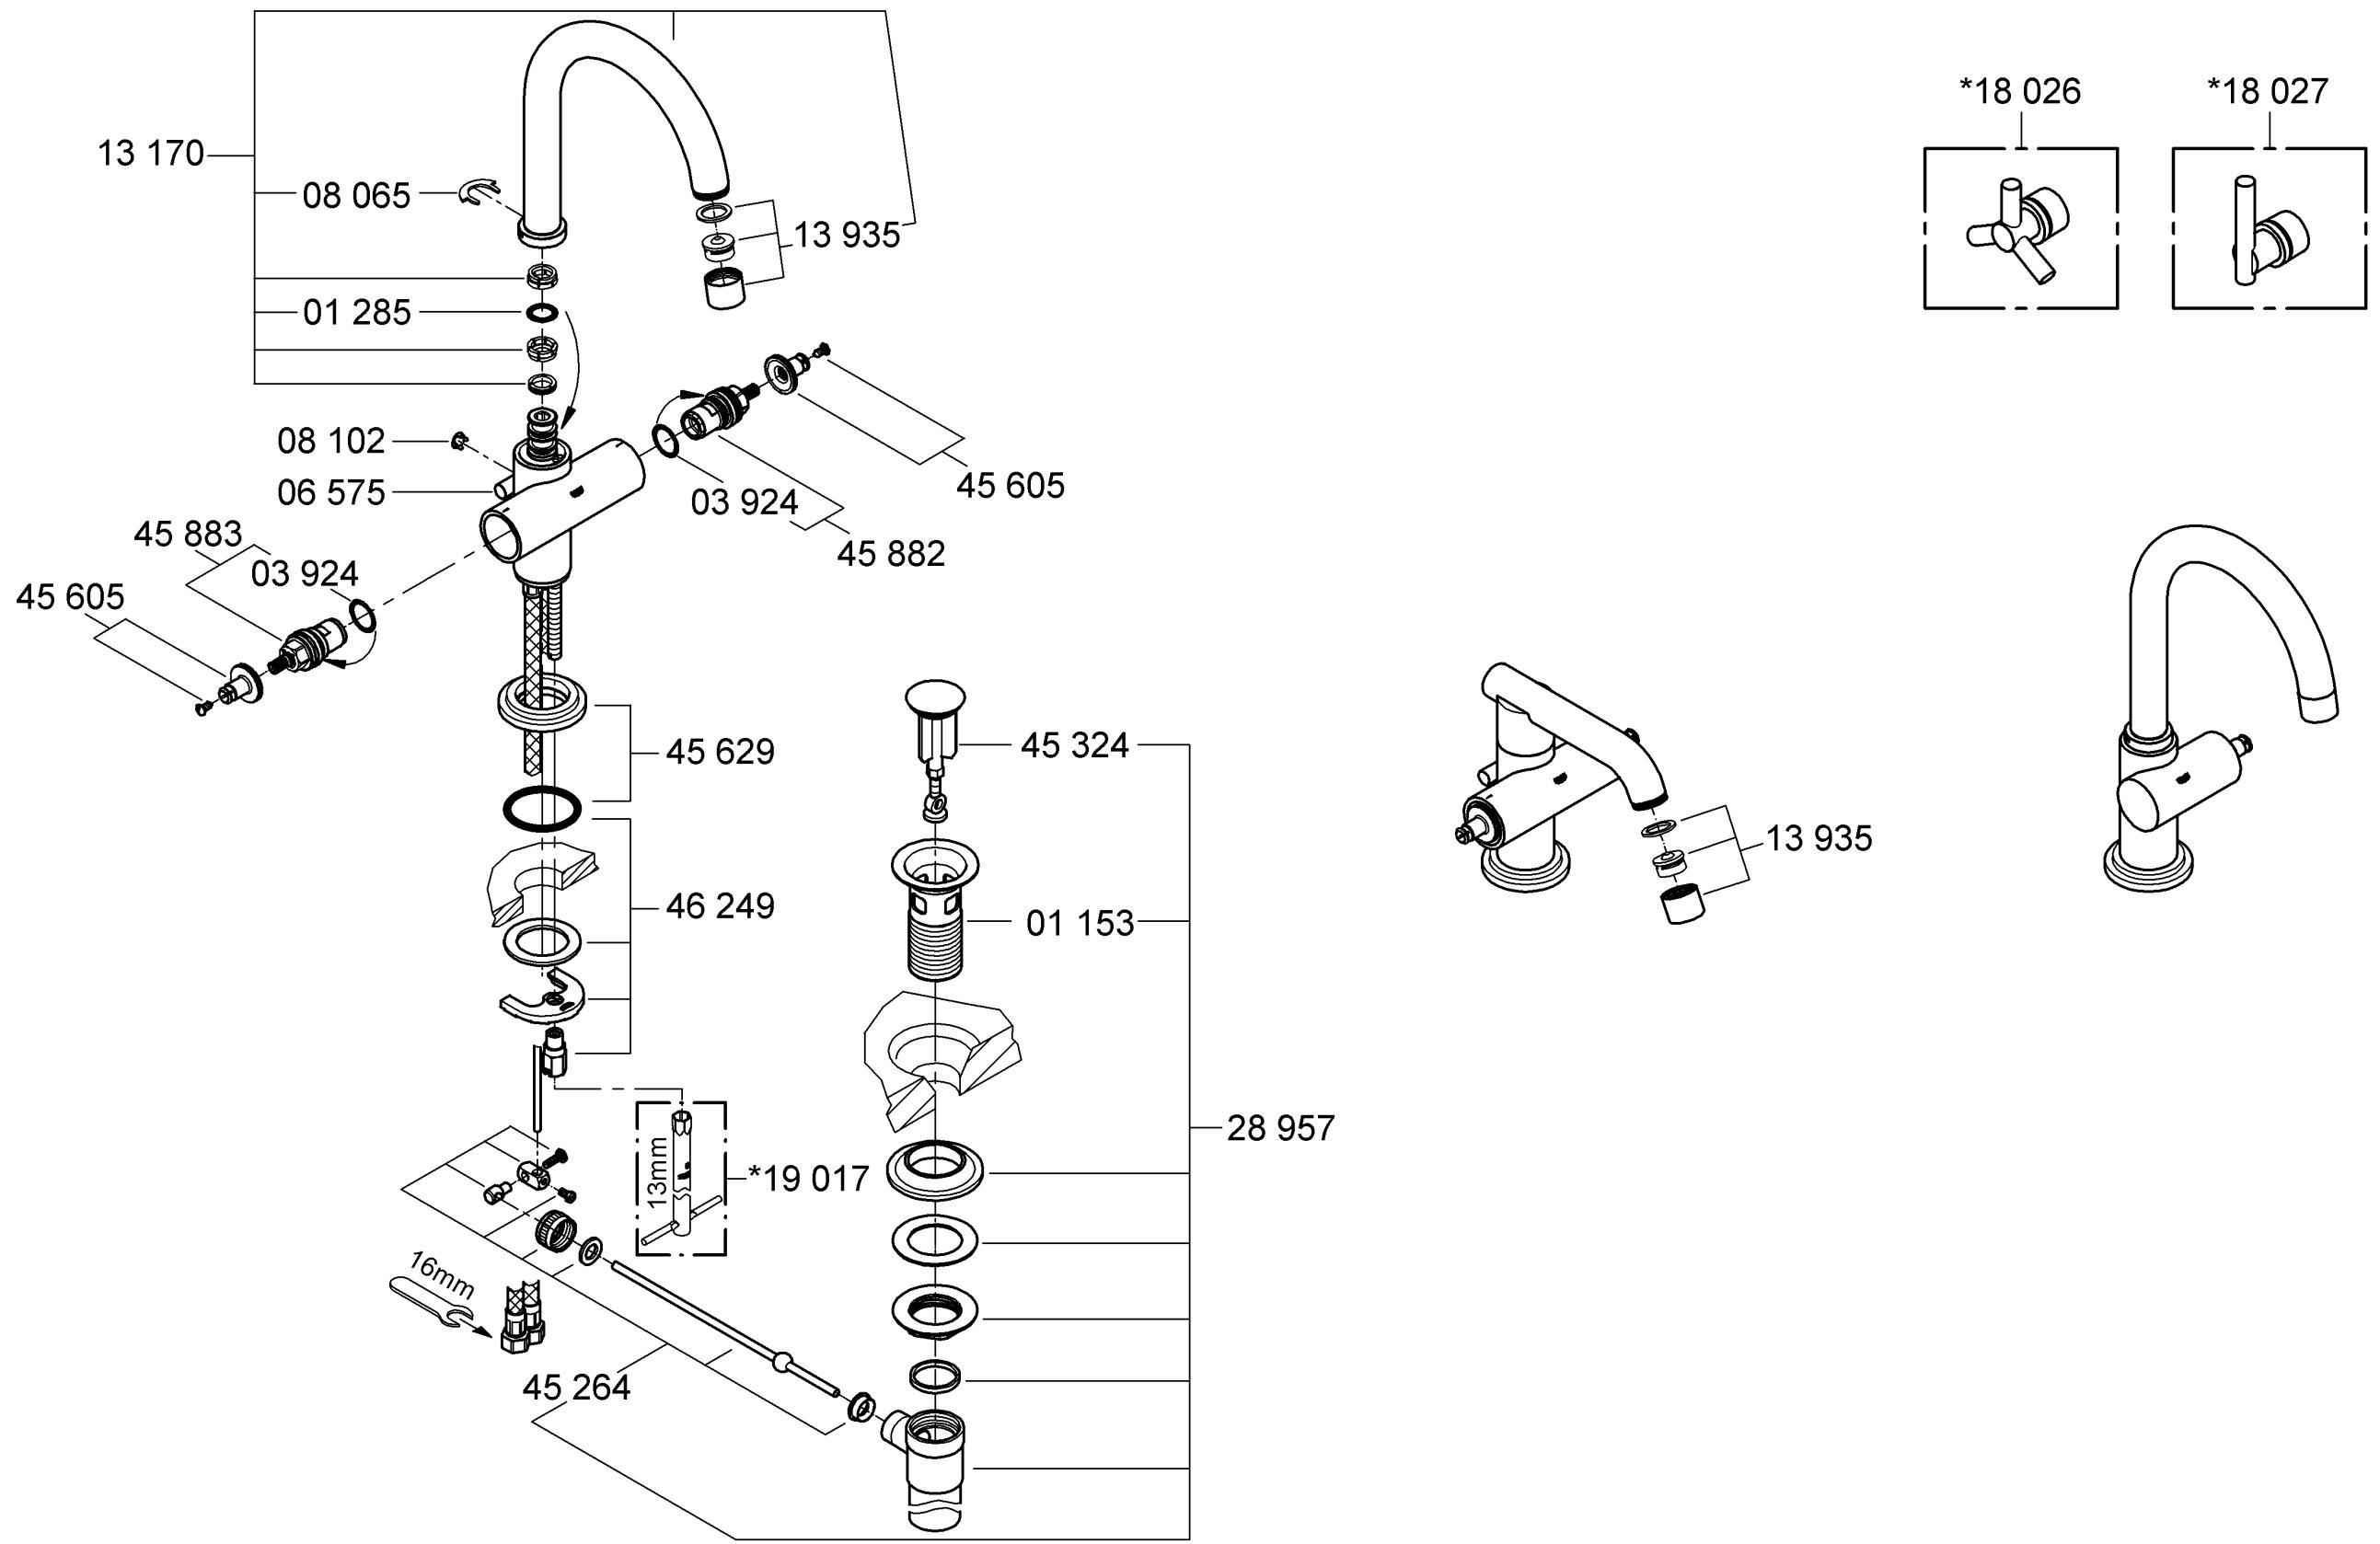Please pass these instructions on to the end user of the fitting!  
S.v.p remettre cette instruction à l'utilisateur de la robinetterie!  
Entregue estas instrucciones al usuario final de la grifería!



## English

### Application

#### Part No. 20 074:

Pillar usefull for:

- directly connection to cold water supply
- connection to outflow of mixed water supply

#### Part No. 21 027 and 21 031:

Operation is possible in conjunction with:

- Pressurized storage heaters

Operation is **not** possible with:

- Low-pressure storage heaters  
(displacement water heaters)

### Specifications

• Max. flow	8.3 L/min or 2.2 gpm/60 psi
EcoJoy	5.7 L/min or 1.5 gpm/60 psi
• Flow pressure	
- min.	7.25 psi
- recommended	14.5 - 72.5 psi
- greater than 72.5 psi, fit pressure reducing valve	
• Max. operating pressure	145 psi
• Test pressure	232 psi

#### Part No. 21 027 and 21 031:

- Temperature
  - max. (hot water inlet)
- Water connection

### Installation

**Flush pipes thoroughly.**

**Installation and connection**, see fold-out page I,  
Fig. [1], [2] and [3].

Refer to the dimensional drawings on fold-out page I.

#### Part No. 20 074 and 21 027:

Fit swivel spout, see Fig. [1].

#### Part No. 21 027 and 21 031:

When assembling, the waste rod (A) has to be placed into the body, see Fig. [2].

**Fit pop-up drain (28 957)**, see fold-out page II, ensure that flange of pop-up drain is sealed.

**Open cold and hot water-supply and check connections for leakage.**

**Maintenance**  
Inspect and clean all parts, replace as necessary and grease with special grease.

**Shut off cold and hot water supply!**

#### I. Replacing the headpart, see Fig. [4].

1. Remove handle (18 026) or lever (18 027).
2. Unscrew screw (B) and pull off snap insert (C).
3. Unscrew headpart (D) using a 17mm socket wrench.
4. Change complete headpart (D) or O-ring (E).

#### II. Flow regulator, see fold-out page II.

Unscrew and clean flow regulator (13 935).

Assemble in reverse order.

**Replacement parts**, see fold-out page II (\* = special accessories).

### Care

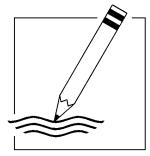
Instructions for care of this single lever faucet will be found in the Limited Warranty supplement.

### Note

Major pressure differences between hot and cold water supply should be avoided.









[www.grohe.com](http://www.grohe.com)

Grohe America Inc.  
241 Covington Drive  
Bloomingdale, IL  
60108  
U.S.A.  
Technical Services  
Phone: 630/582-7711  
Fax: 630/582-7722

Grohe Canada Inc.  
1230 Lakeshore Road East  
Mississauga, Ontario  
Canada, L5E 1E9  
Technical Services  
Services Techniques  
Phone/Tél: 905/271-2929  
Fax/Télécopieur: 905/271-9494