





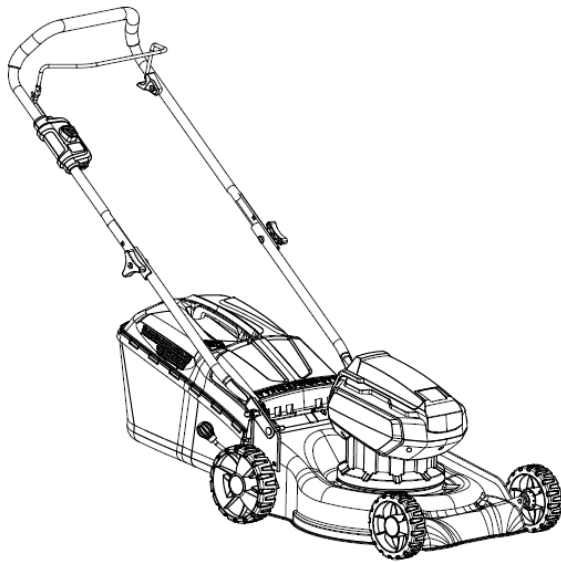


**40V LITHIUM-ION CORDLESS
LAWN MOWER
Model: E142C**



Parts Breakdown

EXPLODED VIEW AND PARTS LIST

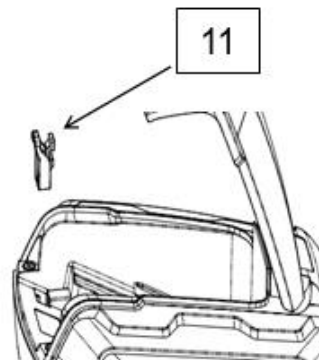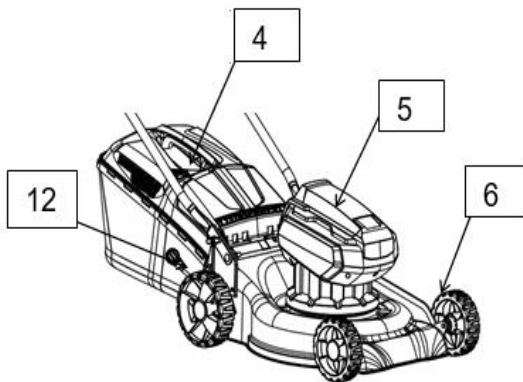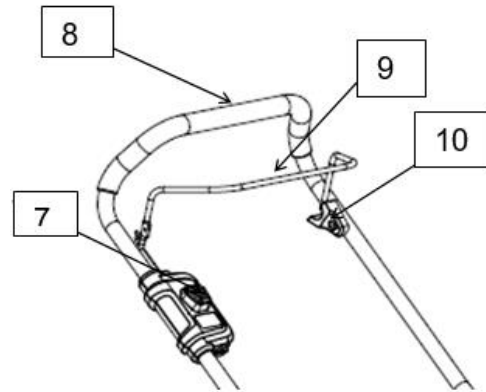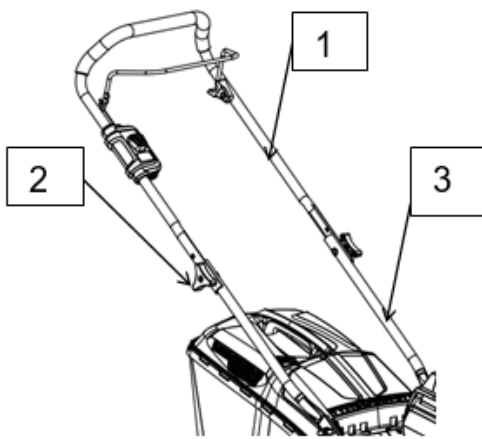

1. Upper Handle
2. Fasten Screw
3. Lower Handle
4. Grass Catcher
5. Battery
6. Wheels

7. Switch Interlock
8. Foam Pipe
9. On/Off Switch
10. Plastic Stopper
11. Safety Key
12. Cutting Height Adjustment Ball