



## PART NUMBER: HVWM 18 - 18" WALL MOUNT FAN OPERATING INSTRUCTIONS

### READ AND SAVE THESE INSTRUCTIONS

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK - DO NOT USE THIS FAN WITH ANY SOLID STATE SPEED CONTROL DEVICES.

Your Maxx Air fan is shipped fully assembled. Enjoy the powerful, cooling breeze that the fan will provide for virtually any indoor application. There are no additional spare parts shipped with this item.

### Specifications

Totally enclosed motor meets NEC 547-7 (2008) requirements for use in Agricultural Areas. 110-120 Volt A/C polarized grounded plug. Do not remove grounding conductor from lug or use with an extension cord.

### Warning

To reduce the risk of fire or electric shock, do not use with any solid state speed control device. This fan motor is equipped with an automatic reset overload device. The fan may start unexpectedly. Do not put any object through the grills into the blade or motor. This fan is designed for indoor use only. Do not expose to the elements or allow to become wet. Do not use to exhaust hazardous chemicals or vapors. Unplug unit for storage, when not in use or moving locations.

### Installation

**Minimum Attachment Requirements:** 2x4 studding capable of supporting at least 50 lbs.

Use a 3/8" diameter x 2" long Lag Screw with flat washer (Not Included). Attach the fan to the wall using the centermost hole in the wall bracket with the above mentioned lag screw. Additional screws can be used to stabilize the wall mount if needed, however, they are not required.

**Please Call: 1.800.433.1626** if you have any questions about the installation or operation of this fan.



### Operating Instructions

1. Plug cord into a properly grounded receptacle.
2. Pull the chain to cycle the fan through the 3 speeds, until the desired speed is reached.

### Cleaning and Maintenance

**Warning:** Unplug the fan from electrical supply before cleaning.

1. Use soft, damp cloth to clean fan. Remove any moisture with a clean, dry cloth.
2. **Do Not** use any cleaning solution that is harmful to paint or plastic.
3. **Do Not** bend blade when cleaning fan.
4. **Motor is permanently sealed and Does Not** require additional lubrication.

VENTAMATIC, LTD. P.O. BOX 728, MINERAL WELLS, TX 76068-0728 • PHONE 800-433-1626 FAX 940-325-9311 • WWW.BVC.COM • E-MAIL: BVC@BVC.COM

*A leader in the ventilation industry for over 60 years, Ventamatic, Ltd. offers a complete line of air movement products for commercial, industrial, agricultural, and residential use sold under these fine names:*

**Ventamatic**

**Cool  
Air**

**MAXX  
AIR**

**nuVent**