

Williams Top Vent Gas-Fired Wall Furnace

REPLACEMENT PARTS FOR MODELS 3508331; 3508332; 3508731 AND 3508732

REF. NO.	DESCRIPTION	PART NO. FOR MODEL:			
		3508331	3508332	3508731	3508732
36	Valve, WILLIAMS Nat. Valve, WILLIAMS L.P.G.	— P322044	P322043 —	— P322042	P322041 —
37	Manifold	12A01	12A01	12A01	12A01
38	Orifice Fitting, Specify Model & Gas	P090500	P090500	P090500	P090500
39	Locknut	P026200	P026200	P026200	P026200
40	Pilot, Cast Iron Burner, Robertshaw L.P.G. Pilot, Cast Iron Burner, Robertshaw Nat. Pilot, Formed Steel Burner, Robertshaw Nat.	P229200 — —	— P229100 P229300	P179800 — —	— P179700 P321837
41	Junction Block Thermocouple	—	—	P321828	P321828
41	Flame Sensor	P271100	P271100	—	—
42	Burner, Cast Iron, Nat. or L.P.G. Burner, Formed Steel, Nat. Gas Only	P025600 —	P025600 7C52	P025600 —	P025600 7C52
43	Thermostat	P322017	P322017	P322017	P322017
44	Ignition Control	P321910	P321910	—	—
45	Wire Assembly	P321522	P321522	—	—
46	Wire Assembly	P321935	P321935	—	—
47	Manifold Adapter	P321887	P321887	P321888	P321888
48	Ignition Control Shield	7C79	7C79	—	—
49	Wire Assembly (2 Required)	—	—	P321935	P321935
☆	Ignition Control Wires (Not Shown)	31B036	31B036	—	—

NOTE: Screws and bolts are standard hardware items, available locally.

For parts illustration see page 40.

Williams Top Vent Gas-Fired Wall Furnace

REPLACEMENT PARTS FOR MODELS 5008731; 5008732; 5508331; 5508332; 6508731 AND 6508732

REF. NO.	DESCRIPTION	PART NO. FOR MODEL:					
		5008731	5008732	5508331	5508332	6508731	6508732
38	★ Side Inner Boot, 10-3/4" Long						
39	★ Side Outer Boot, 10" Long						
40	★ Side Plaster Ground	6701	6701	6701	6701	6701	6701
41	★ Side Grille						
38	★ Side Inner Boot, 1" Long	6702	6702	6702	6702	6702	6702
41	★ Side Grille						
☆	★ Trim Strip Kit (Not Shown)	4701	4701	4701	4701	4701	4701
☆	★ Oval B/W Vent Kit (Not Shown)	9901	9901	9901	9901	9901	9901
42	Manifold	7B80	7B80	7B80	7B80	7B80	7B80
43	Orifice Fitting, Specify Model & Gas (2 Req.)	P090500	P090500	P090500	P090500	P090500	P090500
44	Locknut (2 Req.)	P026200	P026200	P026200	P026200	P026200	P026200
45	Valve, WILLIAMS Nat. Valve, WILLIAMS L.P.G.	— P322042	P322041 —	— P322044	P322043 —	— P322042	P322041 —
46	Thermostat	P322017	P322017	P322017	P322017	P322017	P322017
47	Junction Block Thermocouple	P321828	P321828	—	—	P321828	P321828
47	Flame Sensor	—	—	P271100	P271100	—	—
48	Pilot, Cast Iron Burner, Robertshaw L.P.G. Pilot, Cast Iron Burner, Robertshaw Nat. Pilot, Formed Steel Burner, Robertshaw Nat.	P179800 — —	— P179700 P321837	P229200 — —	— P229100 P229300	P179800 — —	— P179700 —
49	Burner Spacer, Cast Iron Burner (2 Req.) Burner Spacer, Formed Steel Burner (2 Req.)	P018100 —	P018100 P230500	P018100 —	P018100 P230500	P018100 —	P018100 —
50	Burner, Cast Iron, Nat. or L.P.G. (2 Req.) Burner, Formed Steel, Nat. Gas Only (2 Req.)	P025600 —	P025600 7C52	P025600 —	P025600 7C52	P025600 —	P025600 —
51	Ignition Control	—	—	P321910	P321910	—	—
52	Wire Assembly	—	—	P321524	P321524	—	—
53	Wire Assembly	—	—	P322048	P322048	—	—
54	Wire Assembly (2 Req.)	P322048	P322048	—	—	P322048	P322048
55	Manifold Adapter	P321888	P321888	P321887	P321887	P321888	P321888
56	Ignition Control Shield	—	—	7C79	7C79	—	—
57	Ignition Control Wires (Not Shown)	—	—	31B036	31B036	—	—

NOTE: Screws and bolts are standard hardware items, available locally.

★ Not available separately, in kit form only.

For parts illustration see pages 43 and 44.