



## 1 Description

Honeywell's TL7230A thermostat can be connected to an electric heater to control the room temperature.

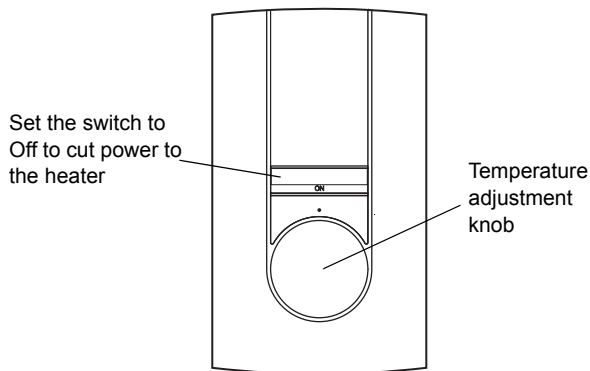

## 2 Assembly/Disassembly

- To remove the control module from the power base, loosen the captive screw underneath the thermostat and pull the two components apart as shown.
- To install the control module onto the power base, reverse the above procedure.

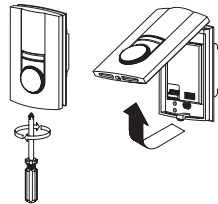


**NOTE:** Always keep the thermostat's vents clean and unobstructed.

## 3 Temperature Setting

Turn the temperature knob to the desired temperature. The temperature setting at the minimum position is 45°F (7°C).


## 4 Temperature Limits

Two potentiometers, on the back of the control module, set the minimum and maximum temperature limits. For example, even if the temperature adjustment knob is placed at 86°F, the temperature will be maintained at 77°F if the maximum temperature limit is set to 77°F.

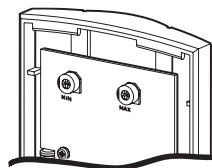

Use a flat-tip screwdriver to rotate each potentiometer until its notch points to the desired temperature limit. Each potentiometer setting corresponds to a temperature setting:

- |                |                |
|----------------|----------------|
| 1: 41°F (5°C)  | 5: 77°F (25°C) |
| 2: 50°F (10°C) | 6: 86°F (30°C) |
| 3: 59°F (15°C) | 7: 95°F (35°C) |
| 4: 68°F (20°C) |                |

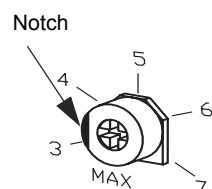

## 5 Technical Specifications

**Power supply:** refer to the power base installation instructions

**Setpoint range:** 45°F, 59°F to 95°F (7°C, 15°C to 35°C)

**Minimum temperature limit:** 41°F to 77°F (5°C to 25°C)

**Maximum temperature limit:** 59°F to 95°F (15°C to 35°C)

**Accuracy:** 0.9°F (0.5°C)

**Storage:** -4°F to 120°F (-20°C to 50°C)

**Heating cycle length:** 15 minutes

## Warranty

Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of five (5) years from the date of purchase by the consumer. If at any time during the warranty period the product is determined to be defective or malfunctions, Honeywell shall repair or replace it (at Honeywell's option).

If the product is defective,

- return it, with a bill of sale or other dated proof of purchase, to the place from which you purchased it, or
- call Honeywell Customer Care at 1-800-468-1502. Customer Care will make the determination whether the product should be returned to the following address: Honeywell Return Goods, Dock 4 MN10-3860, 1885 Douglas Dr N, Golden Valley, MN 55422, or whether a replacement product can be sent to you.

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by Honeywell that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer.

Honeywell's sole responsibility shall be to repair or replace the product within the terms stated above. HONEYWELL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY HONEYWELL MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE FIVE-YEAR DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you have any questions concerning this warranty, please write Honeywell Customer Relations, 1985 Douglas Dr, Golden Valley, MN 55422 or call 1-800-468-1502. In Canada, write Retail Products ON15-02H, Honeywell Limited/Honeywell Limitée, 35 Dynamic Drive, Scarborough, Ontario M1V4Z9.

## Customer Assistance

If you have any questions about the operation of your thermostat, please go to [www.honeywell.com/yourhome](http://www.honeywell.com/yourhome), or call Honeywell Customer Care toll-free at **1-800-468-1502**.