INSTALLATION INSTRUCTIONS NEOLO FLOOR MOUNT BACK OUTLET **FLUSHOMETER TOILET**

American Standard

Style That Works Better


Models 2529.116, 2530.116, 2531.116


Thank you for selecting American Standard - the benchmark of fine quality for over 100 years. To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain installations may require professional help.) Also be sure your installation conforms to local codes.

CAUTION: PRODUCT IS FRAGILE. TWO PEOPLE ARE RECOMMENDED FOR HANDLING TO AVOID BREAKAGE AND POSSIBLE INJURY!

NOTE: Pictures may not exactly define contour of china and components. NOTE: For proper operation these products require a minimum of 30 psi line pressure.

RECOMMENDED TOOLS AND MATERIALS

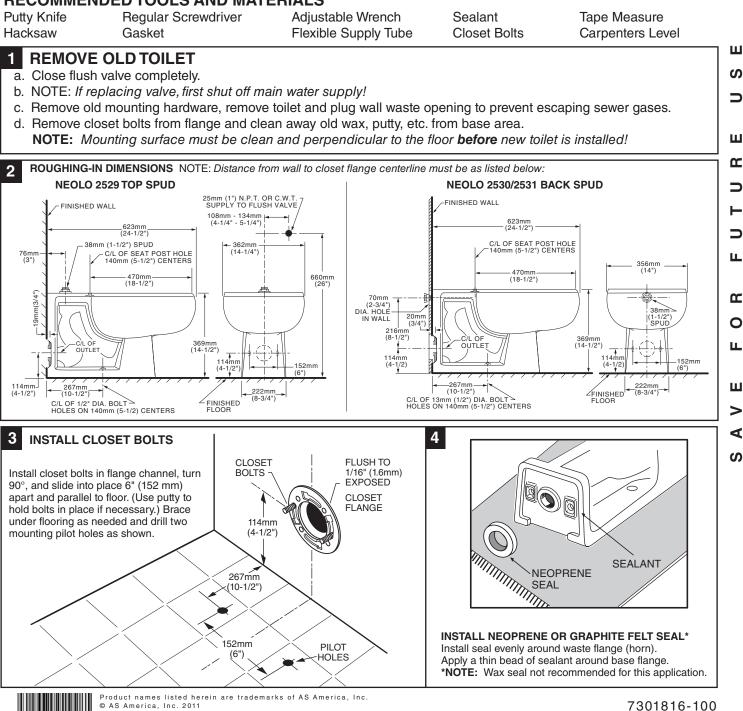

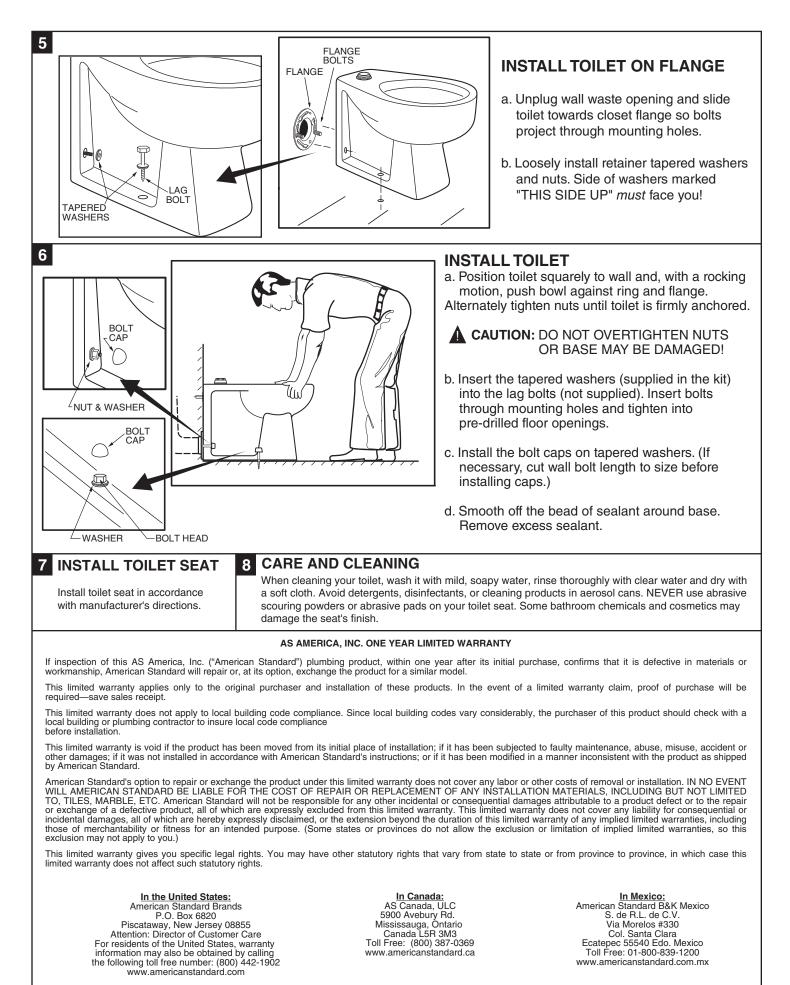

THIS WARRANTY IS NOT TRANSFERABLE FROM ORIGINAL CONSUMER PURCHASER.