

In New Construction and Remodeling

Inches (mm)

IMPORTANT

Before installation begins, make sure that you have the matching dome for the specific model and color bath fixture purchased. Do not attempt to attach dome before bath fixture is fully installed to the wall studs.

INSTALLATION PROCEDURES

A. IF BATH FIXTURE HAS NOT YET BEEN INSTALLED


1. Place dome on top fixture ledge making sure front face of dome is flush with front face of fixture and clamp or hold it in place.
2. Drill two 3/8" (10mm) holes through both the dome flange and fixture ledges at each of the four corners as shown in the diagram. Remove dome.
3. Insert the plastic "Bathlock™" fasteners upwards through the predrilled holes in the bathing fixture ledges, tapping them firmly with a hammer until snug.
4. Install bath fixture per its own enclosed installation instructions and proceed to step C5.

B. IF BATH FIXTURE HAS ALREADY BEEN INSTALLED

1. Drill two 3/8" (10) holes through the dome flange at each of the four corners as shown in diagram.
2. Insert the plastic "Bathlock™" fasteners downward through the predrilled holes in the dome flange, tapping them firmly with a hammer until snug.
3. Place dome on top fixture ledge making sure front face of dome is flush with front face of fixture and clamp or hold in place.
4. Mark the center where each "Bathlock™" fastener touches the top fixture ledge. Remove dome and drill 3/8" (10) holes through each mark on center, and proceed to step C5.


C. FOR BOTH INSTALLATIONS

5. Apply 100% silicone with mildew resistant properties to top fixture ledge and bathlocks. Replace dome and press down firmly guiding fasteners through their respective holes until seam is closed.
6. Tool the squeezed excess silicone with finger. Remove and clean-up all excess silicone before it cures.
7. Place the 2"x4" (50x100) header on top of and flush with the dome top nailing flange and side studs. Toe nail in place.
8. Pre-drill both top and side dome nailing flanges and fasten with 1 1/4" (30) galvanized roofing nails or drywall screws to top and side studs at approx. 8" on center.

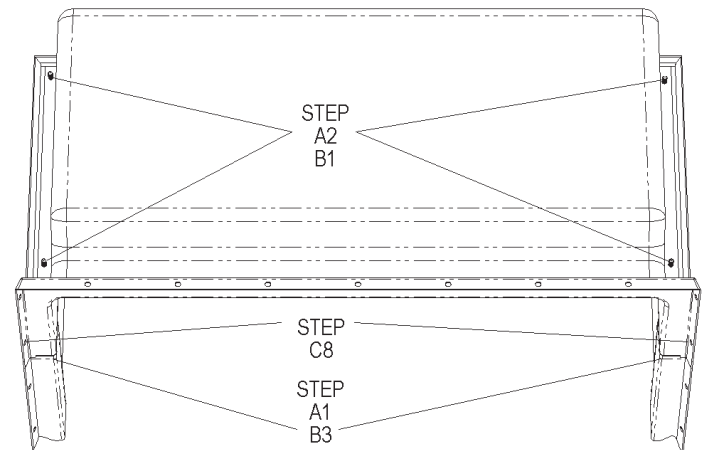

D. CLEAN-UP

1. Use sponge with warm water and a liquid non-abrasive detergent. DO NOT USE scouring pads, steel wool, metal scrapers, sandpaper or anything else that might scratch, mar, or dull the finish. Plaster, latex paint, or other foreign materials may be removed with water, liquid detergent, and plastic scraper. **CAUTION: DO NOT USE** heat, or solvent based cleaning fluids.
2. Dull areas and light scratches may be removed by buffing with a light colored automotive rubbing compound and soft cloth. Dome can be waxed with light colored automotive wax.

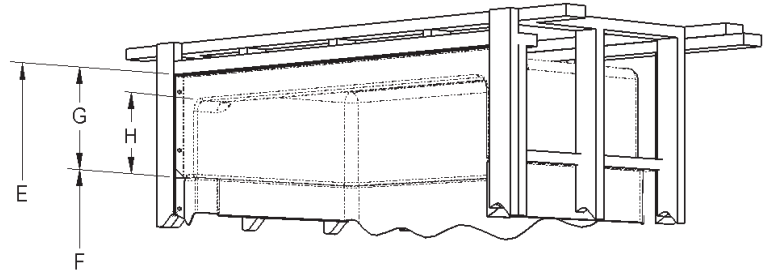

SELECTION GUIDE FOR MATCHING DOMES

Bath Fixture Model Number	Matching Dome Number	Dimensions							
		E		F		G		H	
1363-C/CT Showers	3363-CD	84	(2135)	72	(1830)	12	(305)	8 ½	(216)
1363-CM/CTM Showers	3363-CD	87	(2210)	75	(1905)	12	(305)	8 ½	(216)
1363-TRIO Sectional Shower	3363-TRID	84 ¾	(2155)	72 ¾	(1850)	12	(305)	8 ½	(216)
1483-SG/CTG Showers	3483-SGD	84	(2135)	72	(1830)	12	(305)	8 ½	(216)
1483-SGM/CTGM Showers	3483-SGD	87	(2210)	75	(1905)	12	(305)	8 ½	(216)
1483-CTGN Showers	3483-SGD	88	(2235)	76	(1930)	12	(305)	8 ½	(216)
1483-CTGNM Showers	3483-SGD	91	(2310)	79	(2010)	12	(305)	8 ½	(216)
2603-2P/TRIO Tub/Showers	3603-2PD	84	(2135)	72	(1830)	12	(305)	8 ½	(216)
2603-SG/CTW Tub/Showers	3603-SGD	84	(2135)	72	(1830)	12	(305)	8 ½	(216)
2603-SGT	3603-SGD	90 ¼	(2290)	78 ¼	(1990)	12	(305)	8 ½	(216)
2603-SGM	3603-SGD	86	(2185)	74	(1880)	12	(305)	8 ½	(216)
2603-CTM	3603-SGD	88	(2235)	76	(1930)	12	(305)	8 ½	(216)



Customer Service | Technical Services | Warranty Services

1521 No. Cooper, Ste. 500
 Arlington, TX 76011
 PH: 800-945-2726, 817-801-8300
 FAX: 866-544-5353

LITID2902