

# Voss™ Technical Specification


## Double Robe Hook

# YB5103

### Stock Numbers:

- **YB5103BN – Double Robe Hook**  
Brushed Nickel Finish
- **YB5103CH – Double Robe Hook**  
Chrome Finish
- **YB5103ORB – Double Robe Hook**  
Oil Rubbed Bronze Finish
- **YB5103BG – Double Robe Hook**  
Brushed Gold
- **YB5103NL – Double Robe Hook**  
Polished Nickel

### Dimensions:

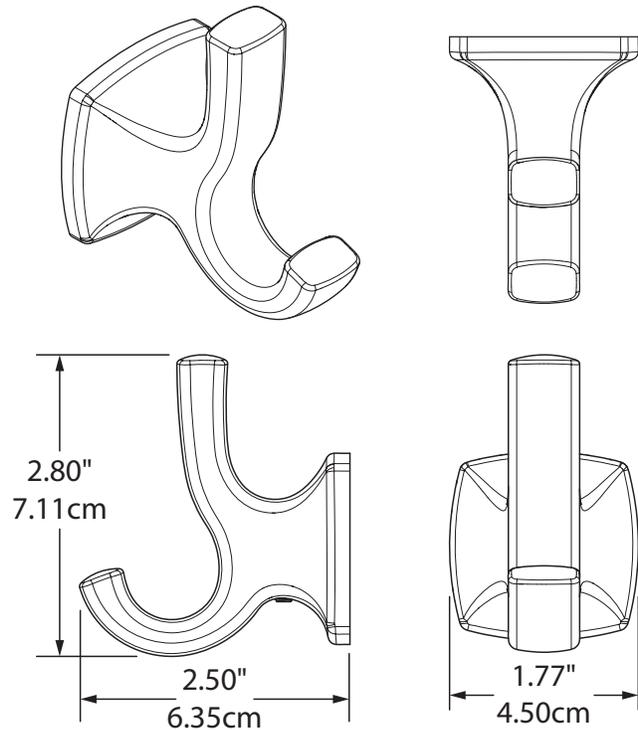

### Materials:

**Robe Hooks** are constructed of zinc.

### Installation Instructions:

1. Remove the mounting bracket from the body by loosening the setscrew.
2. Position the assembled unit on the wall where desired.
3. Lightly mark the outline of the base.
4. Center a mounting bracket within the base outline **with "UP" facing you**.
5. Attach the mounting bracket to the wall, using the wall anchors provided.
6. Mount the base on the corresponding mounting bracket. Check and make sure that the base screw hole is facing down. Assemble a set screw to the base. Use the allen wrench included in a hardware kit to tighten the set screw and secure the assembly to the mounting bracket.

### Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

**Stock Number:** \_\_\_\_\_ Robe Hook  
By Moen Incorporated

# MOEN®

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070  
CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636  
INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726  
CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720  
WWW.MOEN.COM  
© 2019 Moen Incorporated.