Wembley[™] Technical Specification Robe Hook DN8203


Dimensions:


Stock Numbers:


- q DN8203BN Robe Hook Brushed Nickel Finish
- q DN8203TB Robe Hook Tuscan Bronze Finish

2.64

[67]

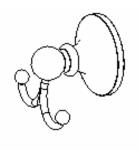

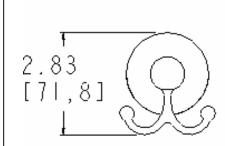

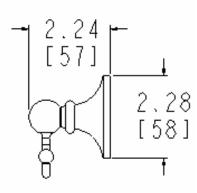

Materials:

Robe Hook is constructed of zinc.

Installation Instructions:

- 1. Remove mounting post from product assembly by loosening the setscrew.
- 2. Position the mounting post on the wall at desired location with notch facing downward, and mark both horizontal hole locations.
- 3. Drill 2 holes as marked using 5/16" drill bit.
- Fold ends of the plastic toggle anchor together (see Figure 1) and insert into each hole in the wall.
- 5. Lightly tap anchors until flush with the wall.
- 6. One at a time, insert plastic pin into each anchor and lightly tap to activate anchor (see Figure 2). Remove pin and repeat on other anchor.
- Place mounting post over anchors with notch facing downward, and insert screws through post into anchors.
- Tighten screws.
- Place assembly over the mounting post with setscrew facing down and tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number:_____Robe Hook

By Creative Specialties

25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 CORPORATE HEADQUARTERS: (800) 321-8809 • FAX: (800) 848-6636 INTERNATIONAL: (440) 962-2000 • FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116 • FAX: (888) 379-2720



©Copyright Creative Specialties International 2006

Literature #BA1330