


TOTO[®]
Perfection by Design

Top Mount Bolt Installation Instructions

(MOUNTING INSTRUCTIONS FOR SKIRTED TOILETS)

THU651N

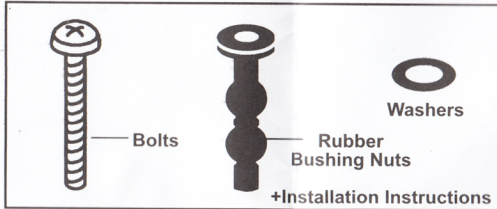

CONTENTS:

(2) Bolts (2) Rubber Bushing Nuts (2) Washers

TOOLS NEEDED:

1. Philips Headed Screwdriver

-Please read these instructions carefully before you begin.

Installation of Soft Closed or Standard Seat.

1. Insert rubber bushing nuts into bowl seat holes.
Note: Remove existing seat if necessary.
2. Place seat on bowl and rotate the hinge unit into place while holding seat down on bowl.
3. Slide washer onto the bolt. Fasten and tighten bolt from top with screwdriver.
Replace bolt cap and lower lid (if necessary).

