
TO COMPRESSION FITTINGS AND VALVES

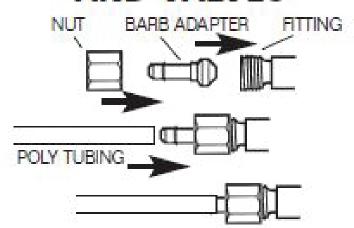

CAUTION: Turn off electricity at circuit breaker before working on evaporative cooler.

NOT FOR USE WITH POTABLE WATER LINES

Poly Tubing: 1. Cut the end of the tube square to insure proper fit. 2. Place barb adapter through nut and tighten onto fitting with a wrench. 3. Push poly tube onto barb adapter.

⚠ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov.

