


ROUTER BITS

Industrial Range

Cove

For decorative molding or edging.
Produces inverted radii.

REPLACEMENT BEARING
NO. 733132-2A

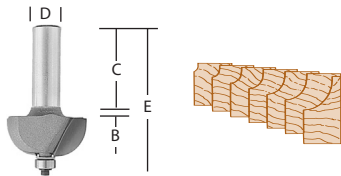


Type	A	B	C	D	E	Part#
C.T. Ball Bearing Pilot	1/4	3/8	1	1/4	1-3/4	733122-6A
C.T. Ball Bearing Pilot	3/8	1/2	1	1/4	1-3/4	733122-8A
C.T. Ball Bearing Pilot	1/2	5/8	1	1/4	1-7/8	733123-0A

Rabbeting

For rabbeting or step cutting edges
without the use of router edge
guides. Self-piloting. Popular
in cabinet shops and boat yard.

REPLACEMENT BEARING
NO. 733132-4A

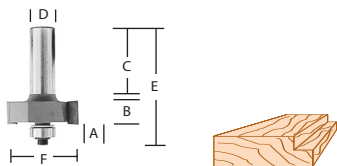


Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	3/8	1/2	1-7/16	1/4	1-3/8	1-1/4	733124-2A
C.T. Ball Bearing Pilot	3/8	1/2	1-5/16	1/2	2-1/4	1-1/4	733282-A

Roman Ogee

For decorative molding or edging.
Popular for furniture and
cabinet work.

REPLACEMENT BEARING
NO. 733132-2A

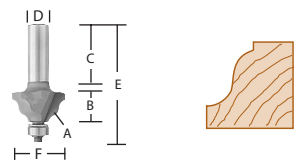


Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	5/32	5/8	1-1/4	1/4	2-1/16	—	733123-2A
C.T. Ball Bearing Pilot	5/32	5/8	1-5/16	1/2	2-7/16	1	733279-A
C.T. Ball Bearing Pilot	1/4	7/8	1-1/4	1/4	2-1/4	—	733123-4A
C.T. Ball Bearing Pilot	1/4	7/8	1-5/16	1/2	2-5/8	1-3/8	733280-A

Classical

Gives a classical beauty to decorative
edging or molding cuts

REPLACEMENT BEARING
NO. 733132-4A

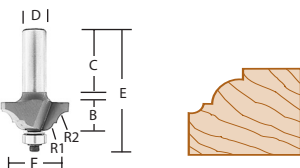


Type	R1	R2	B	C	D	E	F	Part#
C.T. Ball	3/16	5/16	1/2	1	1/4	2-1/16	1-1/4	733125-0A
Bearing Pilot	1/4	7/32	5/8	1	1/4	2-3/32	1-1/2	733125-2A

Corner Bead

Attractive edge cut matches many
older molding designs. Varying
depth setting and more passes
create different designs.

REPLACEMENT BEARING
NO. 733132-4A

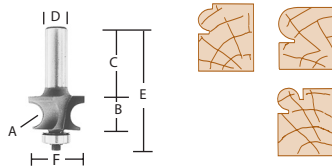


Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	1/8	9/16	1	1/4	2-1/8	7/8	733125-8A

Chamfering

For decorative molding bevel edging
and mitred edging of panel joints.


REPLACEMENT BEARING
NO. 733132-2A

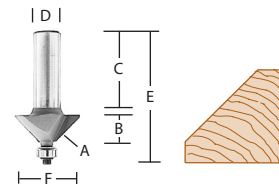


Type	A	B	C	D	E	F	Degree	Part#
C.T. Ball Bearing Pilot	5/8	1/2	1-1/4	1/4	2	1-1/4	45°	733124-4A
C.T. Ball Bearing Pilot	5/8	1/2	1-15/16	1/2	2-3/8	1-1/4	45°	733285-A
C.T. Ball Bearing Pilot	1-1/8	13/16	1-1/4	1/2	2-5/8	2	45°	733286-A
C.T. Ball Bearing Pilot	21/32	11/16	1-15/16	1/4	2-1/4	27/32	15°	733287-A
C.T. Ball Bearing Pilot	13/16	15/16	1-5/16	1/2	2-7/8	1-1/4	22-1/2°	733288-A

Rabbeting - 2 Flute with 4 Ball Bearings

*4 Different Depths of Rabbet:
1/2", 7/16", 3/8" and 5/16"

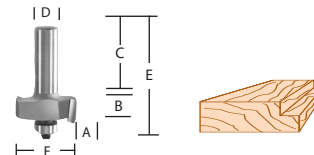

Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	*	1/2	1-5/16	1/4	1-7/8	1-3/8	733283-A
C.T. Ball Bearing Pilot	*	1/2	1-5/16	1/2	2-1/4	1-3/8	733284-A

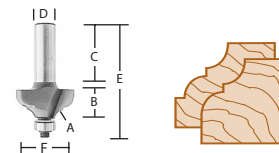
Double Roman Ogee - 2 Flute with Ball Bearing Guide

Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	1/4	7/8	15/16	1/4	2-1/4	1-3/8	733281-A

Wavy Edge

Continuously rounded steps for
decorative edging and molding cuts.
Resulting surfaces tend to remain
dust free in usage.

REPLACEMENT BEARING
NO. 733132-4A

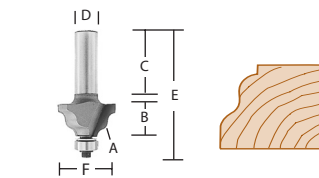


Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	5/32	11/16	1	1/4	2-3/16	1-1/4	733125-6A

Cove and Bead

For a very attractive decorative edge
or molding cut


REPLACEMENT BEARING
NO. 733132-4A

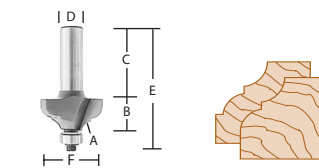

Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	5/32	1/2	1	1/4	2	1-1/8	733126-0A

Bull Nose Bit - 2 Flutes

Routs full rounds on edge of
workpiece. Can be used on thicker
workpieces for full round
nose with flats.

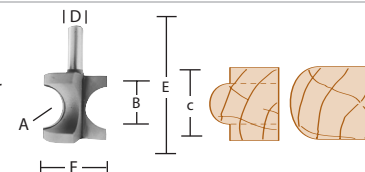

Type	A	B	C	D	E	F	Part#
C.T. Ball Bearing Pilot	3/8	3/4	1-5/16	1/2	1-3/4	1-1/8	733295-A