


## HEALTHMINDER™ Ultra-Thin Fragrance Dispenser

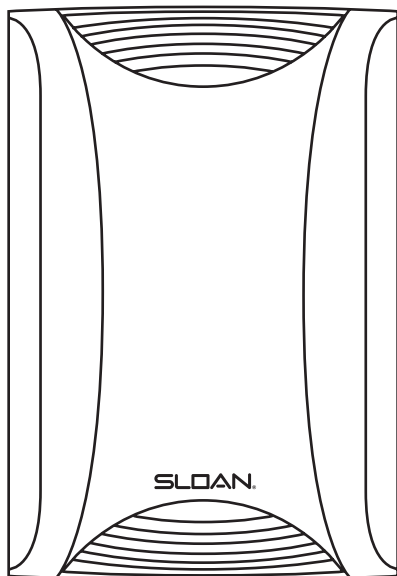

### Installation & Refill Instruction for Ultra-Thin Fragrance Dispenser

Thoroughly read this instruction booklet before installing, refilling or operating the Sloan dispenser.

Keep the **Installation & Refill Instruction Manual** with other product information for future reference.

**SJS-1850** HEALTHMINDER™ Ultra-Thin  
Fragrance Dispenser

### Specifications


Width	5.4" (137 mm)
Height	7.27" (185 mm)
Depth	1.5" (38 mm)

Specifications are subject to change without notice.

### Table of Contents

	Page
Parts Identification	2
Mounting Instructions	2
Installation and Setup	3
Maintenance, Cautions and Consumables	4

## PARTS

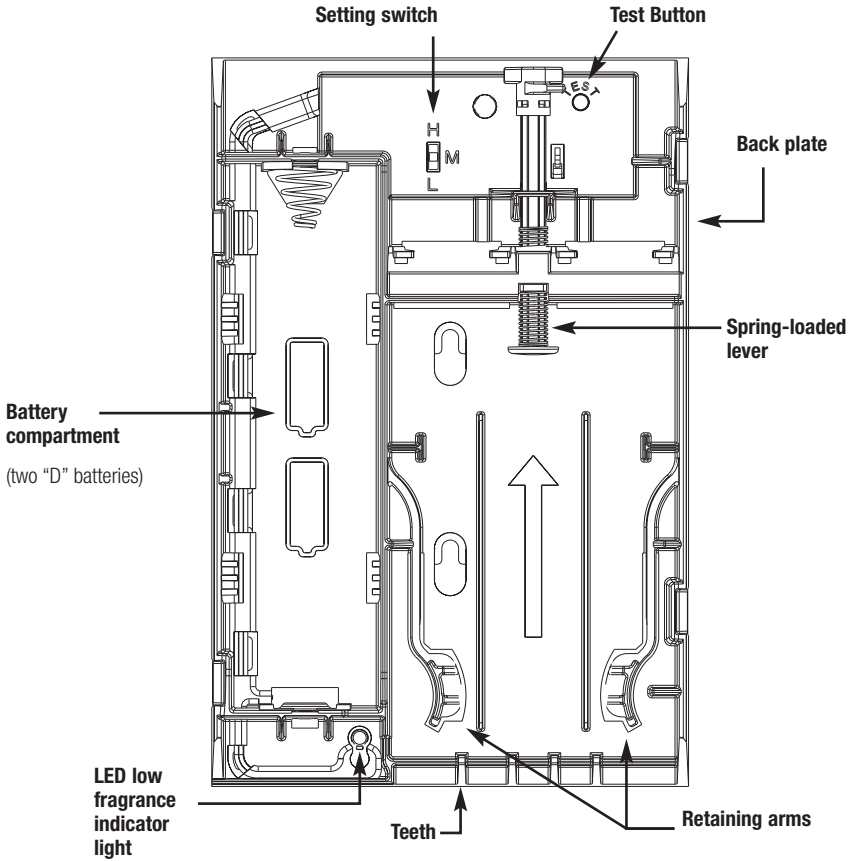

## MOUNTING THE UNIT

Mount the HEALTHMINDER Fragrance Dispenser using either the double-sided mounting tape or screws.


### Method 1

The unit is shipped with tape on the back for mounting without screws. Make sure the mounting surface is flat, clean and dry. Remove protective strip from tape and press dispenser firmly against the mounting surface for about 15 seconds. Remove front cover and press directly against back plate for additional 15 seconds. Allow 4 hours to set before using the dispenser.


### Method 2

The unit can also be mounted using screws. Select appropriate location and insert screws through the back plate.

## INSTALLATION & INITIAL SETUP

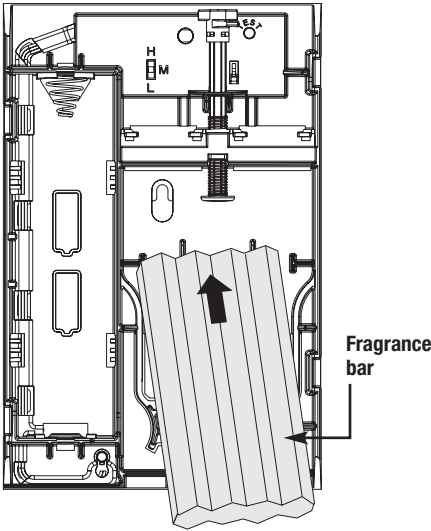



**Step 1** – Insert fragrance bar under tab on left retaining arm as shown above. Be sure fragrance bar is against the spring-loaded lever. The right retaining arm will need to be pushed out to allow the fragrance bar to be in final position. The fragrance bar rests between the retaining arms and upon the “teeth” at the bottom of the unit.

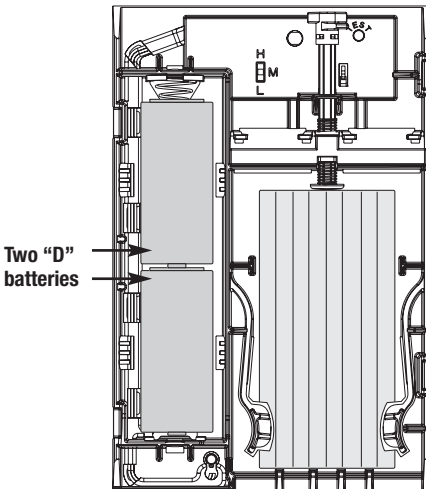

**Step 2** – Install two “D” batteries.

Note: To check if batteries need replacing, push test button. Fan should cycle on for a few seconds indicating batteries are in working order.

**Step 3** – The unit can be set to run at high, medium and low fragrance outputs to suit your needs. Move the setting switch to the desired output of fragrance.

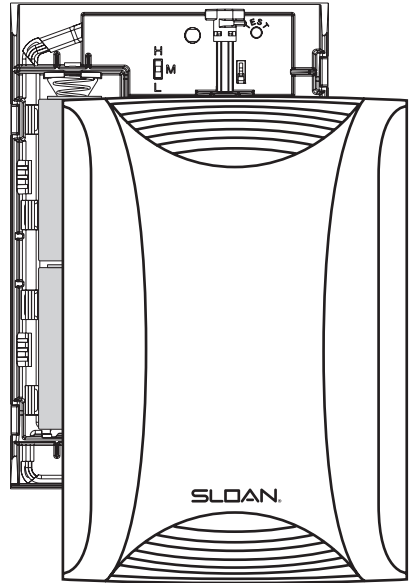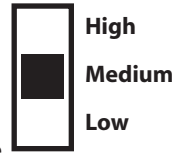

**Step 4** – Replace cover.

Note: As fragrance bar reduces in size, the spring tension lever trips the low fragrance indicator light switch. When the light is on, it's time to replace the fragrance bar.

## MAINTENANCE

### Troubleshooting

Condition	Possible Remedy
Unit Does Not Operate	1) Install new battery 2) Check for proper battery installation

**If trouble continues, call 877-752-6726**

### Caution

1. Keep the cover clean and free of dust to maintain proper air flow.
2. Do not spray the dispenser with water or harsh chemicals. This may result in short circuits or corrosion.
3. Clean only with a damp, soapy cloth.

## CAUTIONS

Take action according to the chemical being used as listed on the consumable container. See the Material Safety Data Sheets.

KEEP OUT OF REACH OF CHILDREN.

CAUTION: Eye irritant. May be harmful if swallowed. DO NOT get in eyes.

DO NOT ingest. Contains fragrance oils.

FIRST AID: In case of eye contact, immediately rinse eyes with water. Remove any contact lenses, and continue to rinse eyes for at least 15 minutes.

If irritation persists, get medical attention. If swallowed, DO NOT induce vomiting.

Call a physician or Poison Control Center immediately.

Store at room temperature away from heat and open flames. Use only in Sloan Ultra-Thin Fragrance Dispenser.

## CONSUMABLES

Product No.	Description	Order No.
SJS-1851-6	Kiwi Melon	5700906
SJS-1851-7	Country Garden	5700907
SJS-1851-8	Wild Berries	5700908
SJS-1851-9	Fresh Outdoors	5700909
SJS-1851-10	Fresh Linen	5700910
SJS-1851-11	Odor Neutralizer	5700911

# SLOAN®

The information contained in this document is subject to change without notice.

Sloan HEALTHMINDER™ Products  
10500 Seymour Avenue  
Franklin Park, IL 60131-1259  
Phone: 877-652-6726  
Fax: 800-447-8329  
[www.sloanvalve.com](http://www.sloanvalve.com)

©2009 Sloan Valve Company  
Printed in the U.S.A. JSD6067.1 01/09