SPEAKMAN®

Neo Collection Combination Series SM-1010-P

DESCRIPTION

Speakman Neo Collection Combination Series unites the best products included in our Neo Series. The combination begins with our anti-scald balanced pressure valve with integral stops, featuring a brass body and adjustable temperature limit stop. The wall plate and handle are designed with definitive Neo Collection styling. Piston type pressure balancing/ceramic regulating cartridge assembly with built-in check valves. Meets ASME A112.18.1 / CSA B125.1 & ASSE 1016 standards. Also provided is the S-2540 brass 7" shower arm with metal wall flange. The featured product in the Neo Collection Combination Series is the ANYSTREAM® S-3010 showerhead with a 4¾" outer spray adjustment ring. Five self-cleaning plunger nozzles resist scale build-up and provide 50 spray streams for a full body coverage pattern. The center core nozzle delivers 12 massaging jets and a combination spray is included. Water-conserving pressure compensating AUTOFLO® device reduces flow to 2.5 GPM / 9.46 LPM maximum, to meet existing ANSI A112.18.1 Standard.

SPECIFICATIONS

SM-1000-P Anti-Scald Balanced Pressure Valve:

Connections: 1/2" female copper sweat inlets & shower outlet; 1/2" NPT female tub outlet

Flow Rate: For use with showerheads rated at 2.0 GPM (7.6 LPM) or higher.

S-3010 Showerhead:

Supply: 1/2" NPT female

Flow Rate: 2.5 GPM / 9.46 LPM MAX


S-2540 Shower Arm:

Supply: ½" NPT male inlet Outlet: ½" NPT male outlet

INSTRUCTIONS

See individual products for installation of the components and warranty information.

ROUGH-IN

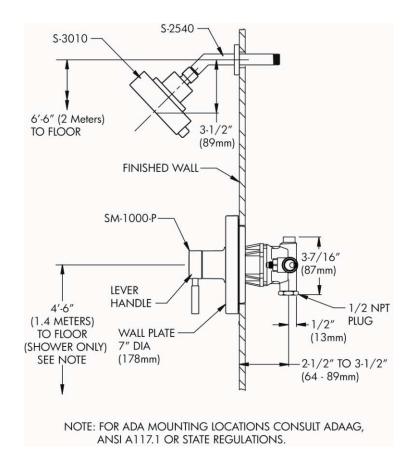

SPEAKMAN®

400 Anchor Mill Rd. New Castle, DE 19720 Phone: 800-537-2107 Fax: 800-977-2747 03/12 Visit us on the web at www.speakmancompany.com IOM-SM-1010

SPEAKMAN®

S-3010 Installation, Operation & Maintenance Instructions ANYSTREAM® SHOWERHEAD

DESCRIPTION

Polished chrome plated ANYSTREAM® S-3010 Showerhead with a 4-3/4" outer spray adjustment ring. 5 self-cleaning plunger nozzles resist scale build-up and provide 45 spray streams for a full body coverage pattern. The center core nozzle delivers twelve massaging jets and a combination spray is included. Water conserving pressure compensating AUTOFLO® device reduces flow to 2.5 GPM/9.46LPM maximum, to meet existing ANSI A112.18.1 Standard. ½" NPT inlet.

SPECIFICATIONS

SUPPLY INLET: 1/2" NPT

FLOW RATE: 2.5 GPM/9.46LPM MAXIMUM

SHIPPING WEIGHT: 1.0 LBS.

BN – Brushed Nickel

- S-3010-E2 Low Flow Showerhead (2.0 GPM/ 7.6LPM)
- S-3010-BN-E2 Low Flow Brushed Nickel Showerhead

(2.0 GPM/ 7.6 LPM)

Fax: 800-977-2747

IOM-S-3010-R1

INSTALLATION

Remove the old shower head from the shower arm. Clean off any debris on the threads of the shower arm. Wrap Teflon tape around the shower arm threads in a clockwise direction. Turning in a clockwise direction, screw the new Speakman shower head onto the shower arm. Tighten with a wrench. Turn the water supply on and check for leaks.


OPERATION

To adjust the spray pattern of the shower head, simply rotate the outer ring to the desired spray (Full-Body, Dual action or Massage). The outer ring can rotate 360°.

MAINTENANCE

The gleaming finish of your SPEAKMAN ANYSTREAM® shower head can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results. The flow control device limits water flow to 2.5 gallons per minute. The small orifices may become clogged with scale and other minerals found in potable water. To clean the flow regulator, simply remove the shower head from the bent arm, dislodge the flow regulator which is located in the inlet and clean as necessary.

ROUGH-IN MEASUREMENTS

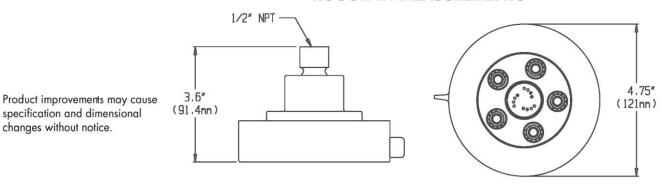

SPEAKMAN®

SPEAKMAN®

S-2540 Installation, Maintenance & Operation Instructions

SHOWER ARM AND FLANGE

DESCRIPTION

Speakman polished chrome plated brass 7" shower arm with brass wall flange.

SPECIFICATIONS

OPTIONS

½" NPT MALE INLET ½" NPT MALE OUTLET SHIPPING WEIGHT: 0.7 LBS.

• BN: Brushed Nickel


INSTALLATION

Slip wall flange onto shower arm. Apply Teflon tape or pipe dope to male inlet threads and thread arm into supply piping behind the wall. Wrench tighten. Slip wall flange flush to wall and tighten set screw to secure flange. Check connection for leaks.

MAINTENANCE

The gleaming finish of your SPEAKMAN S-2540 shower arm can be cleaned by using mild soap and warm water. Dry immediately with a soft, clean cloth for best results.

ROUGH-IN MEASUREMENTS

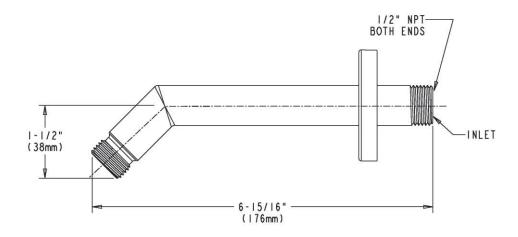

Product improvements may cause specification and dimensional changes without notice.

Fax: 800-977-2747

IOM-S-2540-R1

SPEAKMAN®

SPEAKMAN COMPANY

Neo Collection Combination Series SM-1000-P

DESCRIPTION

Speakman Neo Collection Combination Series unites the best products included in our Neo Series. The combination begins with our anti-scald balanced pressure valve with integral stops, featuring a brass body and adjustable temperature limit stop. The wall plate and handle are designed with definitive Neo Collection styling. Piston type pressure balancing/ceramic regulating cartridge assembly with built-in check valves. Meets ASME A112.18.1 / CSA B125.1 & ASSE 1016 standards.


SPECIFICATIONS

SM-1000-P Anti-Scald Balanced Pressure Valve:

Connections: $\frac{1}{2}$ " female copper sweat inlets & shower outlet; $\frac{1}{2}$ " NPT female tub outlet Flow Rate: For use with showerheads rated at 2.0 GPM (7.6 LPM) or higher.

INSTRUCTIONS


See individual products for installation of the components and warranty information.

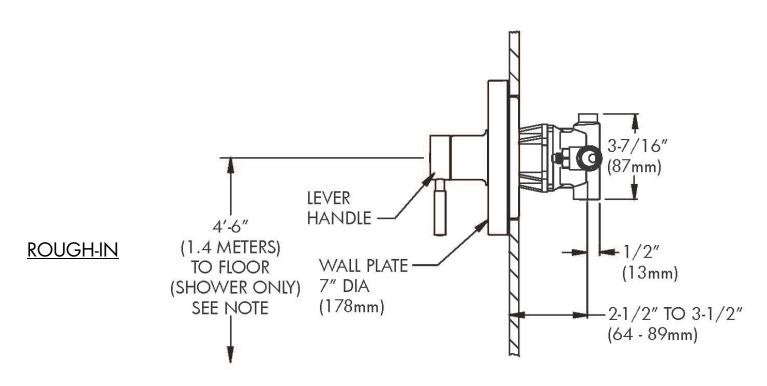

NOTE: FOR ADA MOUNTING LOCATIONS CONSULT ADAAG, ANSI A1 17.1 OR STATE REGULATIONS.

Instructions for Models:

CPV-P-IS

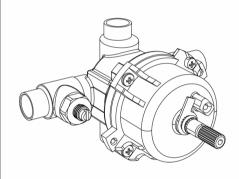

Need Help?

For additional assistance or service call:

SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720

PHONE: 800-537-2107

EMAIL: customerservice@speakmancompany.com

WEB: www.speakmancompany.com

92-3248-R2



What You Need To Know:

Important Notes:

Be sure to read instructions thoroughly before beginning installation.

Be sure to have properly adjusted the Temperature Limiting Stop (TLS) as outlined in this Instruction Manual

Inspect all connections after installation of

This valve has an operating range of 20-80 psi.

Safety Tips:

Follow proper safety precautions recommended by tool manufacturers.

Wear proper eye protection.


Protect surrounding area while soldering.


Maintenance:


Your new shower/bath valve is washerless and requires no routine maintenance.


This valve incorporates a cartridge using a piston style balancing module, combined with a ceramic regulating module. This method eliminates seat washers and other packing materials.


If service is required, please follow the instructions included within the appropriate repair part grouping.

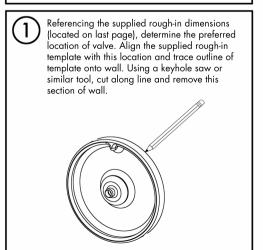


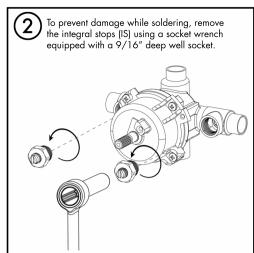


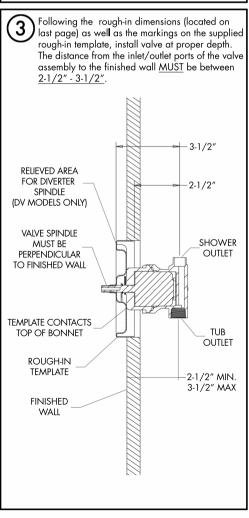


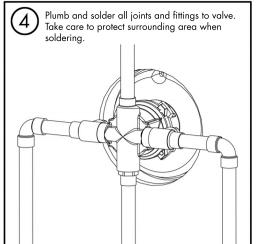


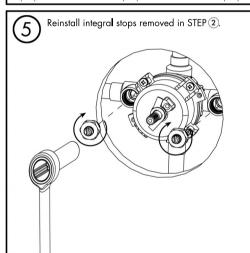


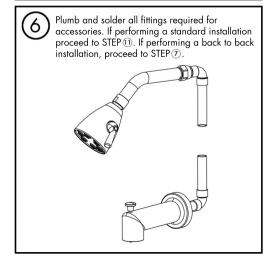


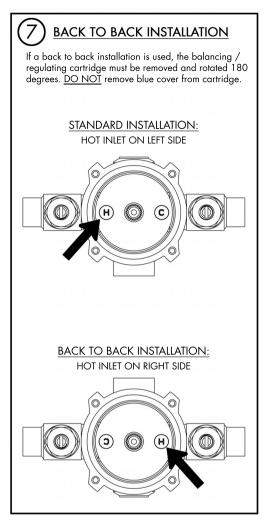


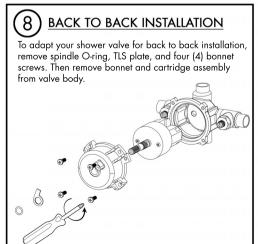

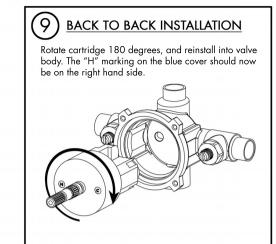


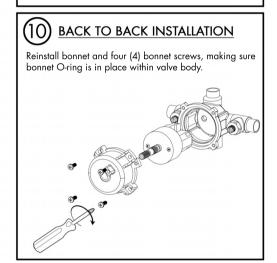


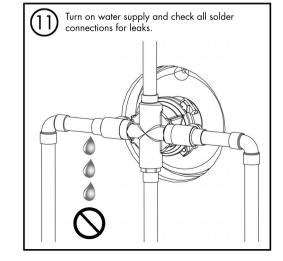




- 1) Slip the retaining O-ring and the TLS plate towards the end of the spindle.
- ② Rotate the valve spindle clockwise to the maximum desired hot water temperature.
- 3 Position the TLS plate so it contacts the lug on the valve bonnet and therefore restricts the clockwise rotation of the spindle.
- (4) Slip the retaining O-ring back into the groove of the spindle to hold the TLS plate in place.
- (5) Rotate the spindle counter clockwise to the "Off" position.

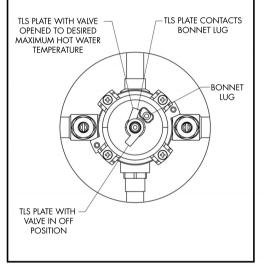

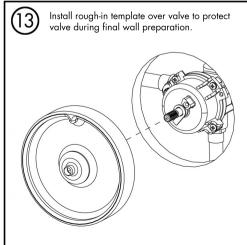


REPAIR PARTS 4 3 RPG05-0718 4 SCREWS, BONNET, & BONNET O-RING RPG05-0884 CARTRIDGE RPG49-0005 CARTRIDGE LOWER QUAD RINGS RPG49-0126 BONNET O-RING

5 RPG49-0076 SPINDLE O-RINGS

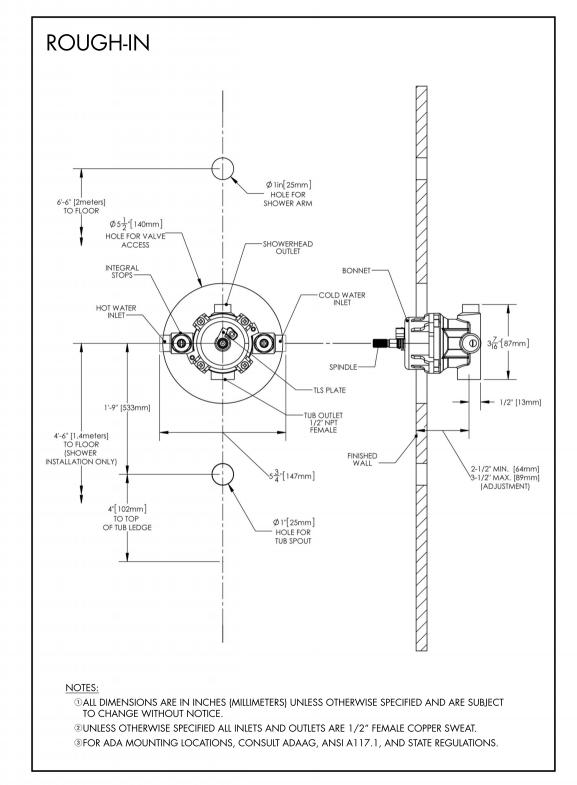

Instructions for Models:

CPT-1000-P CPT-1000-P-BN CPT-1000-P-PN

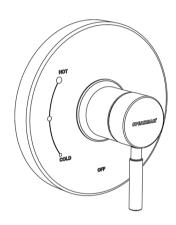

Need Help?

For additional assistance or service call:

SPEAKMAN Company 400 Anchor Mill Road New Castle, DE 19720

PHONE: 800-537-2107

EMAIL: customerservice@speakmancompany.com

WEB: www.speakmancompany.com

92-3264-R2

What You Need To Know:

Tools:

Required:

*Phillips Screwdriver



Helpful:

* Tape Measure



Important Notes:

Be sure to read instructions thoroughly before beginning installation. Do not overtighten any connections or damage may occur.


Be sure to have properly adjusted the Temperature Liminting Stop (TLS) as per the Valve Installation Instructions before installing Valve Trim.

Safety Tips:

Cover your drain to prevent loss of parts.

Maintenance:

Your new valve trim is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.

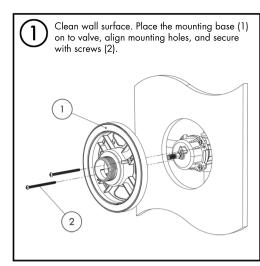

There are 2 Connectors (3) included to allow for both Shallow and Deep mount applications. Please select Connector appropriate for your installation.



For Shallow Mount **Application**



For Deep Mount Application



Confirm that valve is in the "off" position. Place appropriate Connector (3) on spindle of valve making sure to orient the Connector so that one set of splines are in a perfectly vertical position.

