

Trin & Stor

Model Numbers: S, S-SR Series
Version Date: 2016-04-15




30 Stonegate Dr.
Saint John, NB
E2H 0A4 Canada

INDIRECT WATER HEATERS INSTALLATION AND OPERATION INSTRUCTIONS To be installed in conjunction with an NTI Boiler

TABLE OF CONTENTS

1.0	INTRODUCTION	2
	Trin & Stor Specifications	2
	Solar Certifications and Approvals	2
	I.O.M. Checklists	3
2.0	WATER HEATER PIPING	7
	Domestic Side Piping	7
	Boiler System Piping	9
	Solar System Piping	9
3.0	TANK SENSOR	14
4.0	START UP AND CHECK OUT	18
5.0	ANNUAL MAINTENANCE AND INSPECTION	18
6.0	PARTS LIST	19

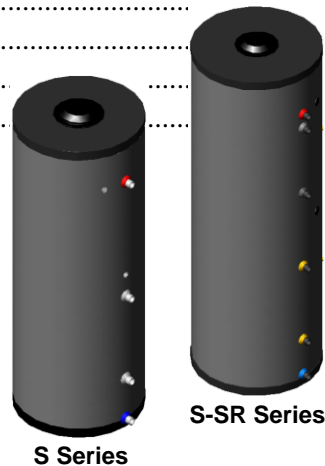

HAZARD SYMBOLS AND DEFINITIONS



Danger Sign: Indicates a hazardous situation which, if not avoided, will result in serious injury or death.




Warning Sign: Indicates a hazardous situation which, if not avoided, could result in serious injury or death.



Caution Sign plus Safety Alert Symbol: Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.



Caution Sign without Safety Alert Symbol: Indicates a hazardous situation which, if not avoided, could result in property damage.



Notice Sign: Indicates a hazardous situation which, if not avoided, could result in property damage.



This Indirect Water Heater must be installed by a licensed and trained Heating Technician or the **Warranty is Void**. Failure to properly install this unit may result in property damage, serious injury to occupants, or possibly death.

1.0 INTRODUCTION



Trin & Stor Specifications

NTI offers two (2) series of Indirect Water Heaters: "S" Series consists of a high performance stainless steel tank and heat exchanger coil and "S-SR" Series consists of a stainless steel tank with dual heat exchanger coils. The S-SR is a multipurpose tank for use in many applications. For example, S-SR is equipped with a Solar Domestic Hot Water backup via a second heat exchanger coil for boiler supply connections ("S-SR" models). It can also be used as: a single boiler as a normal indirect, or with a second boiler for increased recovery rate.

Solar Certifications and Approvals

S80SR and S120SR, when properly installed and maintained as per this manual and the Sol-R-Therm System manual, meet the minimum standards established by US Standard SRCC OG-300 and Canadian Standard CAN/CSA F-379.1-09 for packaged solar domestic hot water systems. See NTI Sol-R-Therm System, Packages SRT-Pk1 and SRT-Pk2.


Table 1-1 Indirect Water Heater Specifications

Model	Storage Capacity USG (L)	Type	Weight (lbs)		Hour 1 Recovery ³ (Gal @ Outlet Temp)		Boiler Output (MBH)	Coil Flow Rate (GPM)	Coil Drop (Feet)	Continuous Rate (GPH @ Outlet Temp)	
			Empty	Filled ¹	140 °F	115 °F				140 °F	115 °F
S40	40 (150)	Stainless Steel Indirect	71	485	213	319	155	10	1.3	181	287
S50	53 (200)		90	655	251	372	180	10	1.6	211	332
S65	66 (250)		104	672	327	484	234	15	3.5	275	432
S80	79 (300)		115	995	378	559	268	15	4.7	314	495
S120	119 (450)		157	1275	485	711	333	20	9.4	389	615
S80SR 	79 (300)	Stainless Steel Solar Indirect	118	840	157 Upper	214 Upper	220	10.4	4.6	182 Upper	291 Upper
					166 Lower	274 Lower			4.8	193 Lower	307 Lower
S120SR 	119 (450)		177	1190	167 Upper	239 Upper	290	13.6	7.6	194 Upper	310 Upper
					177 Lower	274 Lower			8.0	205 Lower	328 Lower

Notes:

- ¹ Ensure the location chosen for the tank is capable of supporting the tank when filled with water.
- ² Refer to Table 1-3 for a list of considerations when selecting a location for the tank.
- ³ Hour 1 Recovery based on 50°F inlet water temperature and 200°F boiler water outlet temperature.


Table 1-2 Indirect Water Heater Characteristics

Attribute	S Series		S-SR Series 	
Tank ¹	stainless steel		stainless steel	
Coil	stainless steel		stainless steel	
Insulation	EPS foam		EPS foam	
Jacket	grey plastic		grey plastic	
Recommended Service Clearances	top	12"	top	12"
	connection side	12"	connection side	12"
	boiler connections	as required	boiler connections	as required
Restrictions	MAWP	150 psi	MAWP	150 psi
	Max tank temp	190°F	Max tank temp	190°F
	Max boiler temp	210°F	Max boiler temp	210°F

Notes:

- ¹ Water used in the tank must meet the water chemistry limits specified in Table 2-1. Levels outside the limits may corrode the tank and shorten its life resulting in damage to tanks and voiding the warranty.

Table 1-3 Trin & Stor System Contents

Part No.	Description	S Series	S-SR Series 
S40	Indirect Water Heater, Stainless Steel	1	-
S50			
S80			
S120			
S80SR	Indirect Water Heater, Stainless Steel - Solar	-	1
S120SR			
84156	Temperature and Pressure Relief Valve, 150psi	1	1
84632	Tank Sensor	1	See Note 1
Notes:			
¹ All NTI Indirect Water Heaters come standard with a Tank Sensor (not applicable for solar applications).			

Parts and Service - See Table 1-3 for a list of components included with each tank and Table 6-1 for replacement parts. For inside sales or technical support, contact NTI by email at info@nythermal.com or call toll free 1-800-688-2575.

Warranty Registration - Trin & Stor tanks have a Limited Lifetime Warranty. A separate Warranty Card is shipped with the tank and packaged with the manual kit. The warranty card explains the coverage options, terms and conditions, actions required to register the warranty, and what to do in the case of a warranty service problem.

I.O.M. Checklists

The various Installation, Operation and Maintenance (IOM) Checklists contained in this manual are meant to be read in conjunction with the details, drawings and safety information to ensure a complete and proper installation.

Pre-Installation Checklist

Inspection and Preparation

1. Remove packaging. Inspect for damage during shipping.
2. Verify package contents as per Table 1-3.
3. Review system specifications and characteristics.
4. Read the Water Chemistry and Warranty requirements.

Locating the Tank

1. Solid foundation, dry location, near boiler.
2. Leave room to service water heater and controls.
3. Sufficient room for boiler piping and servicing boiler.
4. Area free of flammable liquids or combustible vapors.
5. Install where leaks will not damage property.
6. Locate in room where temperature never drops below 50°F (10°C).

Building Interface Requirements

Penetrations through which piping or wiring is passed shall not:

1. Reduce or impair the function or structural integrity of the enclosure.
2. Work shall be performed in accordance with applicable standards, ordinances, and local codes.

Water Damage Protection

1. If the area around the tank location is susceptible to water damage, install a catch pan c/w drain under the tank.
2. Make provisions to protect the surrounding area from water damage should a leak occur from the tank, fitting connections, or relief valve.

General Installation Requirements

Generalized instruction and procedures cannot anticipate all situations. For this reason, only a qualified installer should perform the installation.

Users Responsibility – This manufacturer anticipates the proper installation and care in use of the product. As with any hot water system, there is a risk of property damage and personal injury inherent in the use. NTI cannot supervise the installation and therefore makes it a specific condition for the warranty that the customer will supervise the installation and use of the product to be sure they are performed in accordance with the instructions and I.O.M. Checklists in this manual. It is the User's responsibility to maintain the appliance by having it inspected on an annual basis, serviced as required, and to use the product for the purpose it was intended.

Installers Responsibility – A qualified installer is a licensed person who has appropriate training and a working knowledge of the applicable codes, regulations, tools, equipment and methods necessary to install an indirect water heater. The Installer assumes all responsibility for a safe installation and that it meets the requirements of this document, as well as National and local codes.

Consider the following when selecting a location for the Indirect Water Heater: All tanks will eventually leak at some unpredictable time, so take precautions and use a catch pan with a drain beneath the water heater to contain potential leaks or install the tank in a location not susceptible to water damage. Do not install near a wood stove where excessive heat could melt the water heater's plastic jacket. Boiler supply piping, floor drain locations, relief valve discharge will also need to be considered before selecting a location.

IMPORTANT

Scope of Instruction - This document pertains to the correct installation and operation of the NTI Trin & Stor Indirect Water Heater line. This manual **DOES NOT** provide installation instructions for heating system boilers; therefore, installers must refer to the boiler manufacturers instructions for boiler installation procedures.

IMPORTANT

Emergency Situation - Should the water heater be subject to flood, fire or other damaging conditions turn the power and water to the heater off. **DO NOT** place water heater in operation again until it has been thoroughly checked by qualified service personnel.

NOTICE

Raised Tank - Support the entire tank bottom with ¾" plywood (min) if elevating off the floor with blocks.

NOTICE

Code Requirements - The installation of your NTI Trin & Stor Indirect Water Heater must conform to the requirements in this manual, as well as National and local codes.

CAUTION

Safe Location - DO NOT install indirect water heater close to any high temperature appliances or wood stoves as the water heater jacket is combustible. Do not install where there is a risk of property damage in the event of an eventual leak at some unpredictable time.

WARNING

Annual Service - Failure to have the Indirect Water Heater properly serviced and inspected on a regular basis by a qualified service technician may result in property damage, serious injury or death.

WARNING

Flammable Vapors - DO NOT install this appliance in any location where gasoline, flammable vapors or air-borne contaminants are likely to be present.

WARNING

Warranty Requirements - Improper installation, use, neglect or abuse of this product may not only jeopardize the safe operation of this appliance but also void the warranty.

DANGER

Read and understand this manual prior to proceeding with the installation of the Trin & Stor Indirect Water Heater and the potential hazards associated with DHW. Failure to follow the instructions outlined in this document will result in property damage, serious injury or death.

Safe Temperatures for Potable Water

Two factors used to determine safe hot water temperatures are Legionella and scalding. Potable water needs to be stored at temperatures hot enough to limit the growth of Legionella, yet be cool enough to prevent scalding. Since both hazards present a potential risk to the user, they must be monitored and controlled. Table 1-4 indicates how water temperature affects Legionella bacteria and contributes to scald injury. Use of a thermostatic mixing valve in the indirect water heater plumbing system can help protect against both of these hazards. By storing potable water at higher temperatures, bacteria growth is controlled, while still providing high temperature water for dishwasher applications and low temperature water for bathing. Before proceeding, read the following carefully and take all necessary precautions to avoid potential illness and/or injury that can result from Legionella or scalding hazards.




Legionella Hazard - This bacteria is naturally occurring in surface water and ponds. It can also be found in man-made water systems around the world such as water storage tanks, water distribution systems, fountains, hot tubs, humidification systems, refrigeration systems and grocery produce misters. Health authorities agree that Legionella bacteria most often enter the lungs due to aspiration when contaminated water spray is breathed in as opposed to ingesting drinking water contaminated with the bacteria. Typical illnesses attributed to Legionella include flue like symptoms (Pontiac Fever) and a potentially fatal type of pneumonia (Legionnaires' disease). Failure to follow instructions may result in illness or death.

Contributing Factors to Legionella - Experts acknowledge that Legionella is an identified risk in most water systems. Although eradicating Legionella is improbable, precautions can be taken to control and monitor conditions that promote bacteria growth. According to the World Health Organization (WHO); American Society of Heating, Refrigeration, and Air-conditioning Engineers (ASHRAE); Canada Safety Council (CSC); and Centers for Disease Control (CDC), contributing factors to the growth of Legionella in potable water systems include:

- Minerals and nutrients present in the source water and systems materials
- Stagnation or low flow characteristic of dead ends in distribution piping systems and storage tanks
- Scale, corrosion, and bio film
- Tepid water in cold water lines
- Water storage temperatures optimal for bacteria growth
- Chlorine concentration



Scald Hazard - Hotter water increases the risk of scald injury. There is a hot water scald potential if the storage tank thermostat is set too high. Before changing the temperature setting on the tank thermostat, refer to the thermostat manufacturers recommended settings. Failure to follow these instructions may result in serious injury or death.

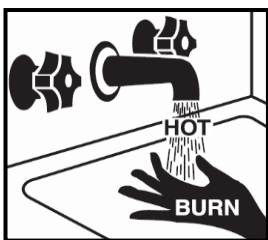

A scald injury can occur when hot steam or liquid makes contact with one or more layers of skin. Scald severity (degree of burn) is directly impacted by exposure time and temperature. Refer to Table 1-4. The following basic precautions are common sense:

- Young children and elderly adults burn more quickly and should use cooler water.
- Never leave a child alone while drawing water in a bathtub.
- Test the water temperature before bathing or showering.
- Turn cold water on first, then add hot water until the temperature is comfortable.



Thermostatic Mixing Valve - When the system requires water at temperatures higher than required for other uses, such as high temperature applications typically greater than 46°C (115°F), a means such as a thermostatic mixing valve shall be installed to temper the water for those uses in order to reduce scald hazard potential. Anti-scald devices such as a thermostatic mixing valve allows potable water to be stored at a higher temperature to limit bacteria growth, and allows water at the tap to be delivered at a lower temperature to prevent scalds. Failure to follow these instructions may result in serious injury or death.

IMPORTANT

Legislation and Guidelines - At the time this document was written, standards and guidelines regulating the prevention of Legionella in the United States and Canada were mostly voluntary. The American Society of Heating, Refrigerating and Air-Conditioning Engineers, Inc. (ASHRAE) is currently in the process of converting its guideline entitled "Minimizing the Risk of Legionellosis Associated with Building Water Systems" (ASHRAE Guideline 12-2000) into an official standard. Consult with your local authorities as to recommended guidelines for controlling Legionella in potable water systems.

NOTICE

Storing water at temperatures $\geq 140^{\circ}\text{F}$ may not be permitted in some States, so check with the authorities having jurisdictions. In Canada, recent changes to the National Plumbing Code requires that domestic hot water be stored at or above 61°C (140°F) and then mixed down to safe temperatures at the tank outlet.

General Guidelines - In the absence of a National standard or local codes, the following are general guidelines for "good practice" on maintaining, monitoring and operating your potable water system:

- Store domestic hot water at temperatures $\geq 61^{\circ}\text{C}$ (140°F).
- Store and distribute cold water at temperatures below 20°C (68°F).
- System supply for uses other than high temperature applications typically greater than 46°C (115°F) shall be equipped with a thermostatic mixing valve on the hot water outlet to reduce potential scald hazards.
- Clean aerators and nozzles on water fixtures on a regular basis to reduce scale build-up.
- Clean storage tanks and remove sediment. Flush storage tanks and piping systems regularly for 10-30 minutes at high water temperatures (depending on guidelines used) to rid the system of sediment and scale that develops, typically in the bottom of storage tanks where water temperature is coolest; and piping runs where water can stagnate.
- Abandoned water lines should be capped off at the distribution main, not at the most convenient place.
- Avoid dead-ends in piping system. If unavoidable, provide a drainage port in these areas at the lowest point to flush out stagnant water regularly.
- Insulate Domestic Hot Water piping and recirculation lines to R-2.6.
- Insulate the last 5 feet of the cold water line entering the tank to R-2.6.
- Keep pipe runs as short as possible to avoid unnecessary heat loss.
- Recommend annual water testing of water in your tank and piping system(s) to monitor water conditions.
- Keep a maintenance record of when your indirect water heater and storage tank were cleaned, piping systems flushed and who did the service work.

Table 1-4 How Water Temperature relates to Legionella and Scald Hazard

Water Temperature ¹		Legionella Bacteria ¹	Water Temperature ^{2,5}		Exposure Time vs Burn ⁵
158-176°F	70-80°C	Disinfection range	158°F	70°C	1 second - 2 nd or 3 rd degree burn
140-149°F	60-65°C	Bacteria die within minutes	140°F	60°C	5 seconds - 2 nd or 3 rd degree burn
122-131°F	50-55°C	Bacteria die within hours	131°F	55°C	5 seconds - 1 st degree burn
68-113°F	20-45°C	Bacteria thrive and multiply	122°F	50°C	1 minute - 1 st degree burn
below 68°F	below 20°C	Bacteria is dormant	111°F	44°C	5 hours - 1 st degree burn ^{3,4}

Notes:

- ¹ Published by Chartered Institute of Plumbing and Heating Engineering, Databyte series, "Safe Hot Water Temperatures".
- ² The elderly and small children are susceptible to bad burns at shorter exposure times than listed in this table.
- ³ A thermostatic mixing valve should be installed on DHW storage tanks when outlet temperatures exceed 115°F [46°C].
- ⁴ Typical water temperature for bathing or showering range between $98-113^{\circ}\text{F}$ [$37-45^{\circ}\text{C}$].
- ⁵ Temperature-Time-Burn Chart published by John Hopkins University, excluding notes.

2.0 WATER HEATER PIPING




WARNING Failure to follow the instructions provided in this section will void your NTI warranty and may result in property damage, fire, serious injury or death.

Domestic Side Piping

The various series of NTI Trin & Stor indirect water heaters are dimensioned and connection ports marked in Figures 2-1 and 2-2. Dimensioned drawings are to be read in conjunction with Table 2-3 and 2-4 which identify the connection type and port size and illustrates typical domestic water piping for a single indirect water heater. Basic system components are identified in Table 2-2 and their function described in detail below. For multiple Indirects, pipe the tanks in parallel using equal pipe lengths between each tank and a common tee to ensure equalized draw.

Energy Efficiency - Although the NTI Trin & Store Indirect Water Heater is an energy-efficient appliance, insulating long pipe runs can improve the system efficiency by conserving energy and reducing standby losses.

System Preparation - Prior to connecting plumbing to the indirect water heater, flush the entire system to ensure it is free of impurities that may be harmful to the system or indirect water heater. Check the water composition of the domestic water supply prior to filling the tank to ensure the water characteristics are within the range specified in Table 2-1. Water used in the tank must meet the water chemistry limits specified in Table 2-1. Levels outside the limits may corrode the tank and shorten its life resulting in damage to the tank and voiding the warranty. If levels are outside the acceptable limits, consult a qualified water treatment expert about treatment options for domestic water.



Damage to tanks resulting from water chemistry levels outside the ranges specified in Table 2-1 can cause corrosion, shorten the life of the tank, and will void the warranty.

Table 2-1 Water Chemistry Requirements

Characteristic	"S" series		"S-SR" series	
	Min	Max	Min	Max
PH	6.0	8.0	6.0	8.0
	0.0	80.0	0.0	80.0
Chloride (ppm)	6.0	8.0	6.0	8.0
	0.0	80.0	0.0	80.0



Many solder fluxes can severely corrode stainless steel. Once piping connections are completed, flush the water heater by drawing at least three (3) times the tank's volume through the water heater prior to heating water in the tank. Failure to flush the tank will void the warranty.

Notes:
¹ Residual solder flux can corrode stainless steel. Flush tank before heating the domestic water in the tank or warranty will be void.

System Components - As a minimum, a properly installed system will include the following major components identified in Table 2-2. It is the responsibility of the installing contractor and system designer to consider all aspects of a proper system design including compliance with local codes, including additional components required for prevention of thermal-siphoning (i.e. heat traps), isolation valves, drain and purge valves, etc.

Table 2-2 Domestic Side Major Component Checklist

Factory Supplied Components	Field Supplied Components
<input type="checkbox"/> Indirect Water Heater	<input type="checkbox"/> System Backflow Preventor ²
<input type="checkbox"/> Temp & Pressure Relief Valve (150PSI)	<input type="checkbox"/> DHW (Potable Water) Expansion Tank ^{2,3}
<input type="checkbox"/> Tank Sensor ¹	<input type="checkbox"/> Thermostatic (Anti-Scald) Mixing Valve
	<input type="checkbox"/> Drain Valve

Notes:
¹ All NTI Indirect Water Heaters come standard with a Tank Sensor (not applicable for solar applications).
² Check if required by local codes.
³ Expansion Tank is mandatory if using a System Backflow Preventor.

Indirect Water Heater - NTI Trin & Stor Indirect Water Heaters are equipped with a single-walled internal heat exchanger coil. To maintain the efficient and reliable operation of the heat exchanger, and to avoid heat exchanger failure, it is critical to ensure the rules and guidelines in this section are followed.

NOTICE

Locate the water heater in an area where leakage from the tank or plumbing connections will not result in water damage to adjacent areas or lower floors. If such a location is unavoidable, install a suitable catch pan with a drain under the appliance. This manufacturer is not responsible for any water damage that may occur in connection with the indirect tank or any of its components.

Temperature and Pressure Relief Valve - Each Indirect comes standard with a factory supplied temperature and pressure relief valve, sized to ASME specifications and compliant with Standard ANSI Z21.22•CSA 4.4 Relief Valves for Hot Water Supply Systems. The field installed relief valve and discharge piping is to be mounted on the Indirect Water Heater in accordance with Figures 2-3 and 2-4 and must be accessible for servicing or replacement. No valve is to be placed between the Relief Valve and the Indirect Water Heater or Relief Valve and discharge pipe. Install discharge piping as shown in Figures 2-3 and 2-4 and in accordance with Installation Checklist 2-1. Temperature and pressure relief valve provided with Sol-R-Therm is Watts 100XL-8.

CAUTION

T&P Normal Operation - The relief valve is not intended for constant duty such as repeated operation due to normal system expansion. If this occurs, correct the situation by installing a properly sized domestic expansion tank as per the expansion tanks manufacturer's instructions.

WARNING

Location - Do not conceal, plug, or remove the relief valve from its designated point of installation. Failure to comply may result in property damage, personal injury or death.

Tank Sensor - designed for installation into the Thermal-Well of the Trin & Stor Indirect Water Heater; the Tank Sensor provides a temperature reading of the tank to an NTI-Trinity Tft, Lx or Tx series boiler, eliminating the need for a separate controller (e.g. the TPI Control Thermostat or other)*. The Tank Sensor incorporates a UL353 rated thermal cutoff switch designed to open at a temperature of 90°C (194°F). Tank Sensor installation instructions are detailed in Section 3.0.

**NTI-Trinity Ti and Ts series boilers are not designed to accept the Tank Sensor reading, therefore the TPI Control Thermostat, or other tank thermostat or aquastat, must be used.*

Drain Valve - The Indirect water heater requires a field supplied drain valve to facilitate emptying the tank for inspection and servicing. Refer to Table 2-4 for drain port size and type.

System Backflow Preventor - Check if a backflow preventor (BFP) is required by local codes. Most plumbing codes require a thermal expansion control device be installed if a backflow preventor, pressure reducing valve or check valve is installed on a domestic supply line. If a backflow prevention device is used, then an expansion tank is mandatory (not optional) and must be installed downstream of any device used to control system thermal expansion. When using multiple indirects, check if a single BFP is required on the domestic supply or if each tank requires its own backflow preventor and respective expansion tank. See Figures 2-3 and 2-4.

DHW (Potable Water) Expansion Tank - This manufacturer recommends installing an expansion tank in the domestic hot water system for the purpose of absorbing the increase in water volume caused by rising water temperature. If required by local codes, the expansion tank must be suitable for use with potable water and be sized in accordance with the water volume of the system and the firing rate of the boiler connected to the indirect water heater. Refer to the expansion tank manufacturer's literature for proper sizing information.

CAUTION

Isolation Valves – Ensure any valves installed between the expansion tank and indirect tank inlet are left in the OPEN position during normal operation. Failure to follow these instructions may result in discharge of the Relief Valve and result in property damage or personal injury.

Thermostatic (Anti-Scald) Mixing Valve - A mixing valve is recommended on branches supplying low temperature water to endpoint plumbing fixtures when domestic hot water is stored above 46°C (115°F).



Temperature Limiting Device - When the tank requires water at temperatures higher than 46°C (115°F), a mixing valve shall be installed to temper the water and reduce the risk of scalding. Failure to follow these instructions may result in serious injury or death.

Boiler System Piping

The NTI Trin & Stor line of high efficiency Indirect Water Heaters are intended to be heated by an external hot water boiler where hot water supplied from the boiler is connected to ports 4 and 5 on the indirect tank, and circulated through an internal heat exchanger coil in the tank. See Figures 2-3 and 2-4. The tanks are specifically designed for low temperature applications [$<100^{\circ}\text{C}$ (210°F)] and are NOT intended to be used as a pool heating system or in conjunction with steam boilers or other high temperature appliances where water temperatures could potentially exceed 100°C (210°F). Refer to the Installation and Operation Manual included with the boiler for detailed instructions on connecting boiler system piping to the indirect water heater.



High Temperature Applications - Trin & Stor Indirect Water Heaters are not to be used for high temperature applications [greater than 100°C (210°F)] or in conjunction with steam producing systems as this will void the warranty. Failure to follow these instructions may damage the tank resulting in property damage, serious injury or death.

Solar System Piping

The NTI Trin & Stor "S-SR" line of high efficiency Solar Indirect Water Heaters is intended to be heated by a solar thermal system where a propylene glycol mixture, heated by the solar collectors, is circulated through the internal heat exchanger coil in the tank. This manual does not cover installation of solar thermal system piping. If installing a Solar Indirect Water Heater as part of an NTI Packaged Solar Domestic Hot Water System, refer to Solar Plumbing section in the NTI Sol-R-Therm Manual for detailed instructions regarding solar system piping.

Domestic side piping for solar thermal can be done in a number of configurations depending on the application. Since solar tanks are specifically designed for high temperature applications in the event of collector stagnation and overheating, tank sensors specifically designed for these high temperature applications must be used instead of the Tank Sensor (P/N 84632).



Tank Sensor (P/N 84632) - The Tank Sensor is compatible with any Trin & Stor tank, including "S-SR" models, when used as a normal indirect water heater. The Tank Sensor is not intended for use with Solar Domestic Hot Water Systems. An alternate sensor and thermostat control, normally provided with the solar thermal system, should be used.

Pre-heat Option - The most common application is where the solar water heater is plumbed in series with an auxiliary water heater which is used as the primary storage tank. The hot water out (connection port 2) of the solar water heater is connected to the cold water inlet of the auxiliary water heater, so when there is a demand for domestic hot water, the auxiliary water heater immediately brings in pre-heated water from the solar tank to replace it instead of cold water directly from the potable water system. In this configuration the upper heat exchanger coil is not required, which is why connection ports 4 and 5 are capped. Refer to Figure 2-4 and Table 2-1 respectively for location and sizes of connection ports for applicable solar models.

Back Up Option - This option is used when the solar water heater is the primary storage tank and solar water heating alone is not enough to meet the domestic hot water demand. Hot water supplied from the boiler is connected to ports 4 and 5 on the solar water heater and circulated through the upper heat exchanger coil in the tank. See Figure 2-4. Refer to the Installation and Operation Manual included with the boiler for detailed instructions on connecting boiler system piping to the indirect solar water heater.

Storage Option - This option is used when the solar water heater is the primary storage tank and is connected to an additional storage tank for use as extra storage or as a dump zone for excess heat. In this method, hot water from the solar water heater is transferred to the secondary storage tank using connections 4 and 5. Note that flow direction is reversed for this application compared to the back up option. See Figure 2-4.

Figure 2-1 Indirect Water Heater Dimensions

"S" SERIES

- ① RELIEF VALVE CONNECTION
- ② HOT WATER OUT CONNECTION
- ③ RECIRCULATION CONNECTION (OPTIONAL)
- ④ BOILER WATER IN CONNECTION
- ⑤ BOILER WATER OUT CONNECTION
- ⑥ AQUASTAT CONNECTION (LOWER)
- ⑦ COLD WATER IN / DRAIN CONNECTION

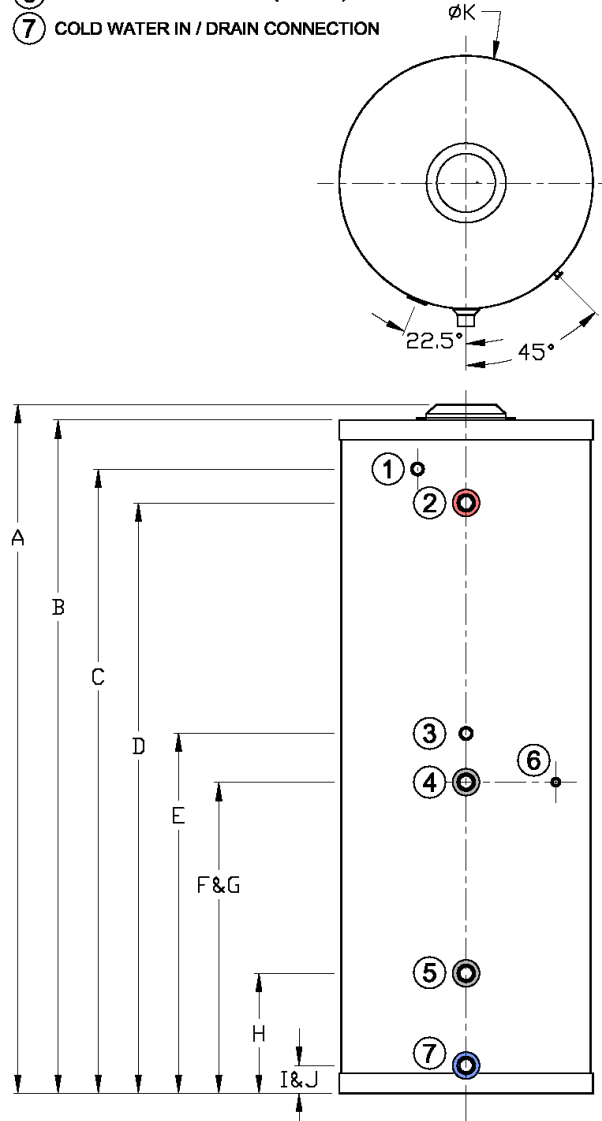


Table 2-3 Indirect Water Heater Dimensions


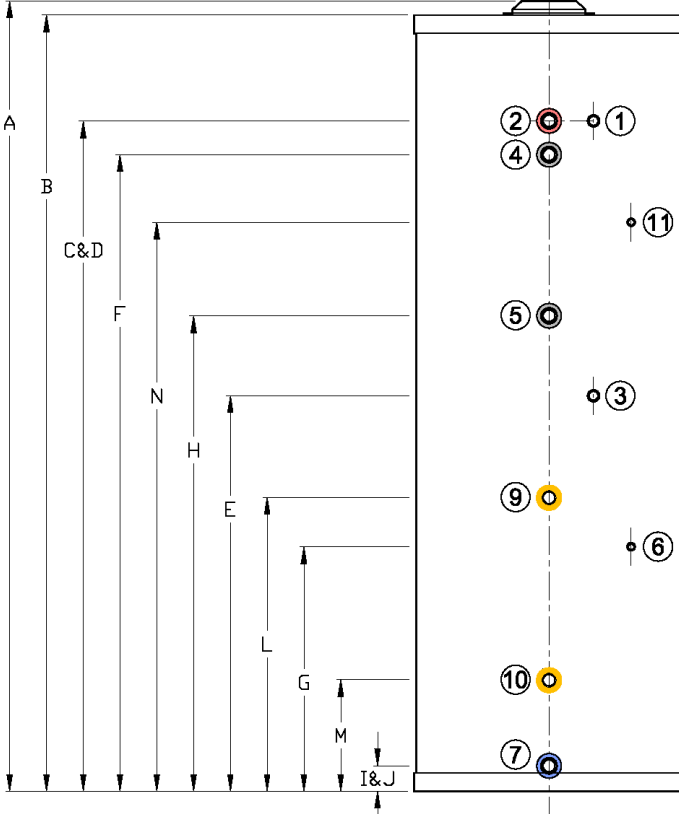
Model	Dimensions (inches)													
	A	B	C	D	E	F	G	H	I	J	K	L	M	N
S40	56	54 ³ / ₄	46 ³ / ₄	46 ³ / ₄	29 ¹ / ₈	25 ¹ / ₈	26 ¹ / ₈	9 ³ / ₈	2 ¹ / ₈	2 ¹ / ₈	20 ¹ / ₈	-	-	-
S50	49	47 ³ / ₄	39 ³ / ₄	39 ³ / ₈	29 ⁵ / ₈	26	27	9 ⁷ / ₈	2	2	23 ⁷ / ₈	-	-	-
S65	70 ⁵ / ₈	69 ¹ / ₄	60 ¹ / ₄	60 ¹ / ₄	32 ¹ / ₂	27 ¹ / ₈	28 ¹ / ₈	10 ¹ / ₄	2	2	21 ⁷ / ₈	-	-	-
S80	70 ¹ / ₄	69	60 ⁷ / ₈	60	35	29 ⁵ / ₈	30 ⁵ / ₈	10 ³ / ₄	2 ³ / ₈	2 ³ / ₈	23 ⁷ / ₈	-	-	-
S120	-	64 ³ / ₄	53 ⁵ / ₈	53 ¹ / ₄	44 ⁵ / ₈	40 ⁵ / ₈	41 ⁵ / ₈	12 ¹ / ₄	2 ³ / ₈	2 ³ / ₈	28 ⁷ / ₈	-	-	-
S80SR ☀	70 ¹ / ₄	68 ⁷ / ₈	59 ¹ / ₂	59 ¹ / ₂	35 ¹ / ₈	56 ¹ / ₂	21 ³ / ₄	42 ¹ / ₄	2	2	23 ⁷ / ₈	26 ¹ / ₈	9 ⁷ / ₈	50 ¹ / ₂
S120SR ☀	-	64 ³ / ₄	52 ³ / ₈	52 ³ / ₈	31 ³ / ₈	49 ¹ / ₄	22 ¹ / ₂	35 ¹ / ₈	2	2	28 ³ / ₄	27 ⁵ / ₈	11 ¹ / ₂	46 ¹ / ₈

Figure 2-2 Solar Indirect Water Heater Dimensions 

Installation Checklist

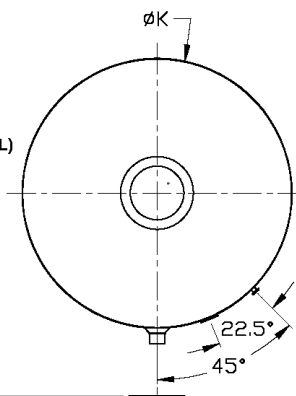

"S-SR" SERIES

- ① RELIEF VALVE CONNECTION
- ② HOT WATER OUT CONNECTION
- ③ RECIRCULATION CONNECTION (OPTIONAL)
- ④ BOILER WATER IN CONNECTION (OPTIONAL)
- ⑤ BOILER WATER OUT CONNECTION (OPTIONAL)
- ⑥ AQUASTAT CONNECTION (LOWER)
- ⑦ COLD WATER IN / DRAIN CONNECTION
- ⑨ SOLAR IN CONNECTION
- ⑩ SOLAR OUT CONNECTION
- ⑪ AQUASTAT CONNECTION (UPPER)




1. Install domestic side piping as per National and local codes. Refer to Figures 2-3 and 2-4.
2. Do not over tighten brass threads on water supply connections.
3. Do not apply heat to the cold water inlet on the indirect water heater.
4. Mark the water supply for future reference.
5. Install a mixing valve on the hot water outlet of the water heater as shown in Figure 2-3 and 2-4.
6. Install boiler water connections (if used) as per the boiler manufacturer's instructions.
7. Cap (plug) any unused connection ports, such as domestic hot water recirculation.
8. Install T&P relief valve on tank in accordance with local codes and Figures 2-1 through 2-4.
9. Ensure no valve is installed between the relief valve and indirect water heater or discharge pipe.
10. Ensure discharge piping material used is rated to withstand temperatures up to 250°F (120°C).
11. Direct discharge to a safe area (drain) where hot water or steam will not cause damage or injury.
12. Terminate discharge pipe 6"-12" above the floor. Do not connect discharge pipe directly to a drain.
13. Typical discharge pipe diameter 3/4". Maximum pipe length is 15 feet with 2 or less elbows.
14. Cut discharge end of pipe at a 45° angle to reduce the risk of being blocked or capped.
15. Install drain valve in the location and orientation shown in Figures 2-3 and 2-4.
16. Verify with local codes if a backflow preventor or thermal expansion control device is required.
17. Install a domestic expansion tank downstream of the backflow preventor (control device).
18. Install the domestic expansion tank on the cold water supply of the domestic side piping.
19. Flush the tank thoroughly before filling to heat water. Fill heat exchanger coil with heating fluid.
20. Insulate the last 5 feet of the cold water line and all domestic hot water piping to R-2.6.

Table 2-4 Indirect Water Heater Connections

Model	Connection Port Sizes										
	T&P RV	Hot Out	Recirc	Boiler In	Boiler Out	A-stat Lw	Cold In	Drain	Solar In	Solar Out	A-stat Up
	1	2	3	4	5	6	7	8	9	10	11
S40	3/4" F	1" M	3/4" F	1" M	1" M	Well	1" M	-	-	-	-
S50	3/4" F	1" M	3/4" F	1" M	1" M	Well	1" M	-	-	-	-
S65	3/4" F	1" M	3/4" F	1" M	1" M	Well	1" M	-	-	-	-
S80	3/4" F	1 1/2" M	3/4" F	1" M	1" M	Well	1 1/2" M	-	-	-	-
S120	3/4" F	1 1/2" M	3/4" F	1" M	1" M	Well	1 1/2" M	-	-	-	-
S80SR 	1" F	1" F	1 1/4" F	3/4" M	3/4" M	Well	1" M	-	3/4" M	3/4" M	Well
S120SR 	1" F	1 1/4" M	1 1/4" F	3/4" M	3/4" M	Well	1 1/4" M	-	3/4" M	3/4" M	Well

* Connections are NPT unless noted otherwise. All Aquastat (Tank Sensor) connections are friction fit immersion wells.

Figure 2-3 IWH Domestic Plumbing Schematic

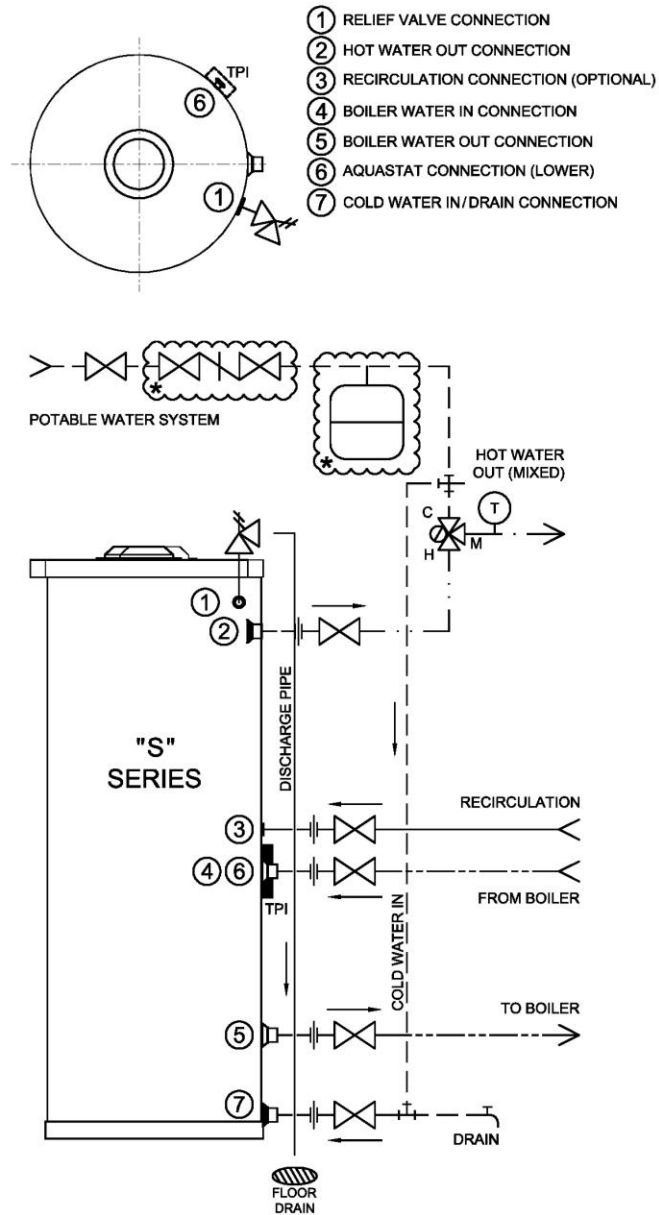


LEGEND

SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
---	DOMESTIC COLD WATER		THERMOSTATIC MIXING VALVE		DRAIN VALVE
---	DOMESTIC HOT WATER (MIXED)		TEMPERATURE AND PRESSURE RELIEF VALVE		UNION
---	DOMESTIC HOT WATER		TEMPERATURE GAUGE		TEE
---	BOILER LOOP		EXPANSION TANK	*	CHECK LOCAL CODES
---	DHW RECIRCULATION (OPTIONAL)		ISOLATION VALVE		FLOOR DRAIN
	THERMOSTAT CONTROL (AQUASTAT CONNECTION)		BACKFLOW PREVENTOR		OPTIONAL
→	FLOW DIRECTION				

Figure 2-4 Solar Indirect Water Heaters ☀

Domestic Plumbing Schematic

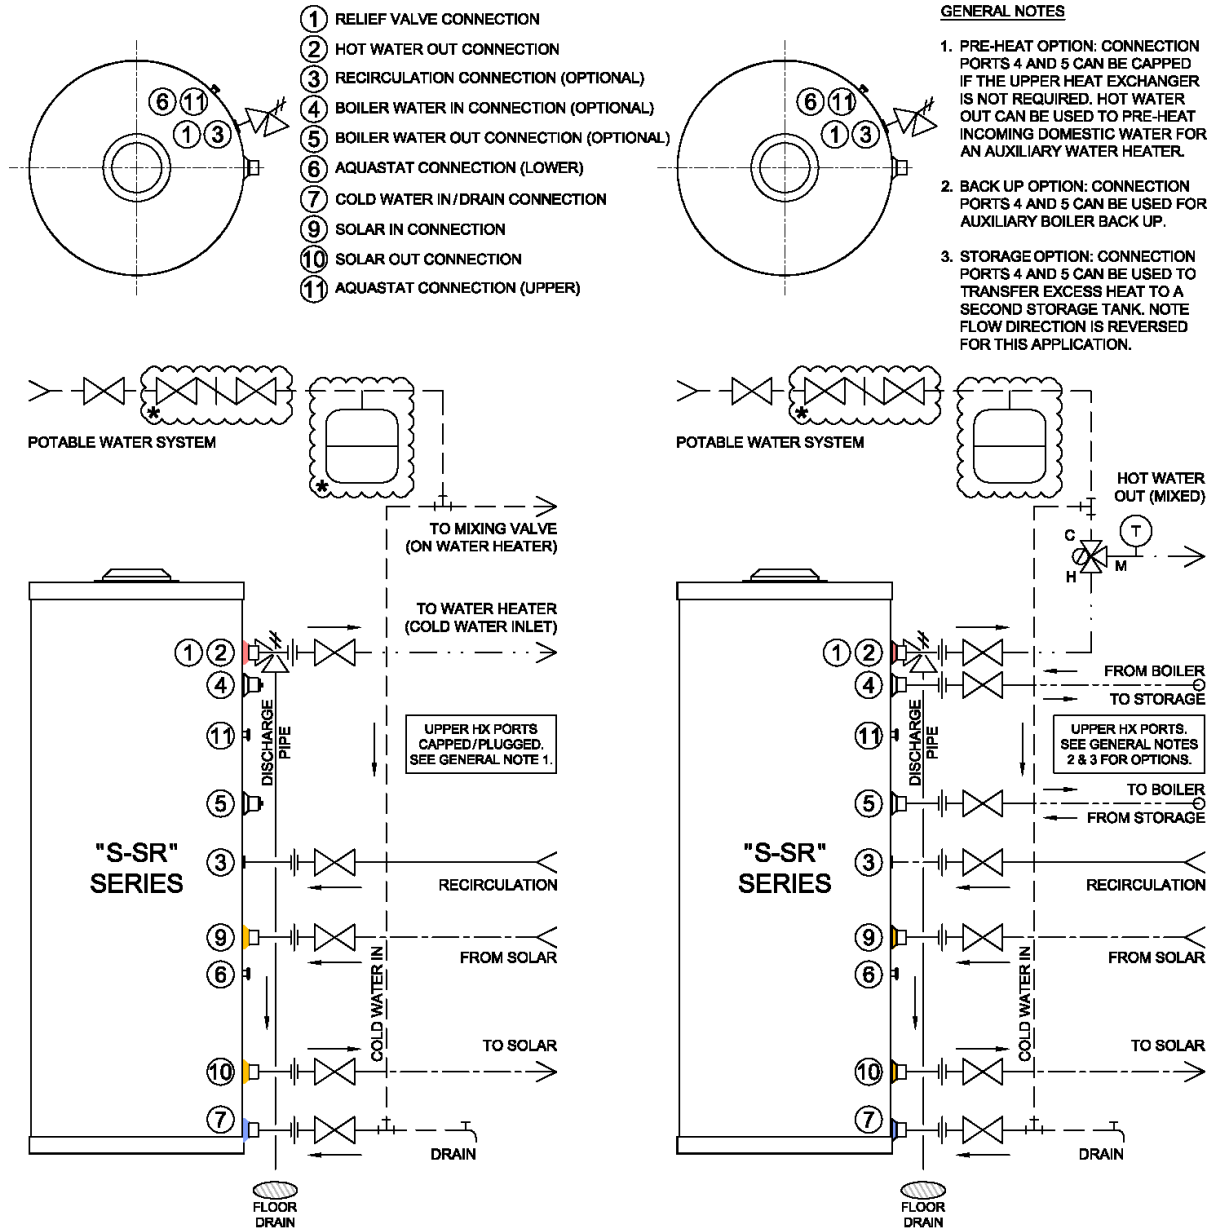

LEGEND					
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
---	DOMESTIC COLD WATER		THERMOSTATIC MIXING VALVE		DRAIN/FILL VALVE
- . - .	DOMESTIC HOT WATER (MIXED)		TEMPERATURE AND PRESSURE RELIEF VALVE		UNION
- . . - .	DOMESTIC HOT WATER		TEMPERATURE GAUGE		TEE
----	BOILER / STORAGE (OPTIONAL)		EXPANSION TANK	*	CHECK LOCAL CODES
— — — —	DHW RECIRCULATION (OPTIONAL)		ISOLATION VALVE		FLOOR DRAIN
-----	SOLAR GLYCOL LOOP (PUMP TO TANK)		BACKFLOW PREVENTOR		OPTIONAL
→	FLOW DIRECTION				

3.0 TANK SENSOR


The Tank Sensor is compatible with all NTI-Trinity Lx, Tft and Tx series boilers; follow the instructions below for proper installation, wiring and boiler control settings.

NOTICE


The Tank Sensor is NOT compatible with NTI-Trinity Ti and Ts series boilers; when using a Trin & Stor Indirect Water Heater with one of these boilers, the TPI Control Thermostat, or other thermostat or aquastat must be used. TPI Control Thermostat instructions are included with the TPI.

Installation Instructions

1 LOCATE THERMAL WELL

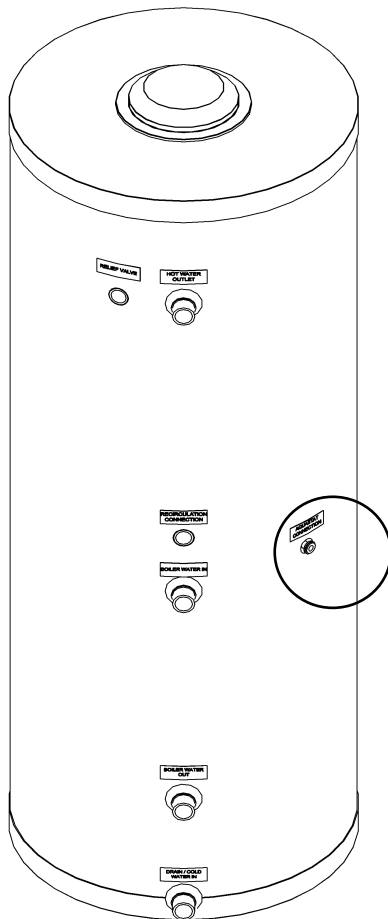


2 INSERT TANK SENSOR

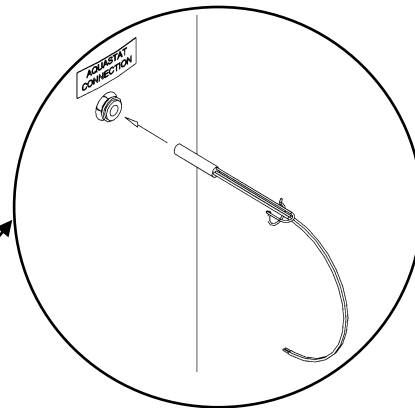

3 SECURE TANK SENSOR


Hook wire retainer to the back of the Thermal-Well rib; pull to ensure it will not fall-out.

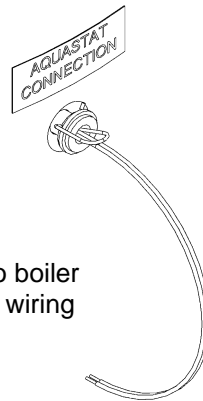

Connect to boiler using field wiring


4 WIRE TANK SENSOR TO BOILER

Figure 3-1 Tank Sensor to Trinity Tft Boiler

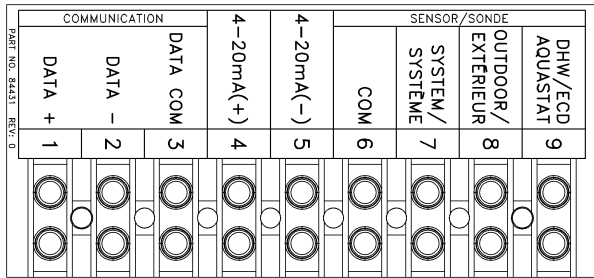


Wire Tank Sensor to terminals **COM** and **DHW AQUASTAT**

Figure 3-2 Tank Sensor to Trinity Lx Boiler

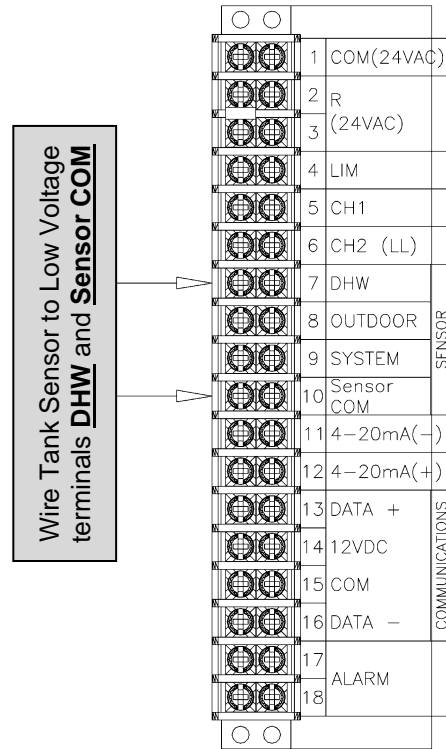

Wire Tank Sensor to Low Voltage terminals **DHW** and **Sensor COM**

Figure 3-3 Tank Sensor to Trinity Tx & Vmax Boiler

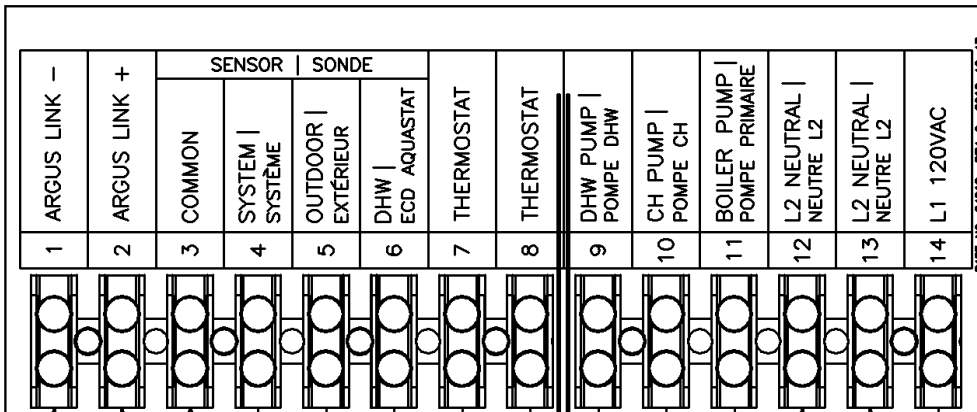

Wire Tank Sensor to terminals **COMMON** and **DHW AQUASTAT**

5 ADJUST BOILER CONTROL SETTINGS

In order for the boiler to operate correctly with the Tank Sensor, some control settings need to be adjusted.

Trinity Tft & Lx Series Boilers

Navigate to the Domestic Hot Water Configuration screen and make the following adjustments to the settings; see Figure 3-4 (note: you must login before adjustments can be made):

1. **Demand switch** – change setting to “DHW sensor with On/Off temperatures”
2. **Modulation sensor** – maintain factory setting of “Outlet sensor”
3. **Setpoint** – set to the desired boiler operating temperature during a DHW demand. Typical setting = 170°F to 190°F.
4. **Demand On temperature** – tank temperature where a DHW demand is initiated, must be set lower than the “Demand Off temperature. Typical setting = 120°F to 140°F.
5. **Demand Off temperature** – tank temperature where a DHW demand is ended, must be set higher than the “Demand On temperature. Typical setting = 125°F to 145°F.

Figure 3-4 Trinity Tft & Lx Series Control Adjustments

The screenshot shows the 'Domestic Hot Water Configuration' screen on a TFT 110 device. The screen has a blue header with a home icon, a user icon, and a login icon. The settings are as follows:

DHW enable	Enabled
Demand switch	DHW sensor with On/Off temperature
Modulation sensor	Outlet sensor
Setpoint	180°F
Off hysteresis	10°F
On hysteresis	10°F
Demand On temperature	135°F
Demand Off temperature	140°F
DHW priority override time	2 hours

Callouts on the right side of the screen indicate the following adjustments:


- Must be logged in**: Points to the login icon in the top right corner.
- Set as illustrated**: Points to the 'Demand switch' setting.
- Adjust to desired boiler temperature**: Points to the 'Setpoint' setting.
- Adjust to desired tank temperature**: Points to the 'Demand On temperature' and 'Demand Off temperature' settings.

For more information on adjusting the boiler control settings, refer to: APPENDIX A – CONTROLLER AND TOUCHSCREEN DISPLAY INSTRUCTIONS FOR TRINITY Tft & Lx SERIES included with the boiler.

Trinity Tx & Vmax Series Boilers

Access the Installer Menu and navigate to setting 2-08 (DHW mode); adjust setting to “1” for the controller function with a Tank Sensor. Set Installer Menu setting 2-07 (DHW setpoint) to the desired tank temperature. See Figure 3-5.

Figure 3-5 Trinity Tx Series Control Adjustments

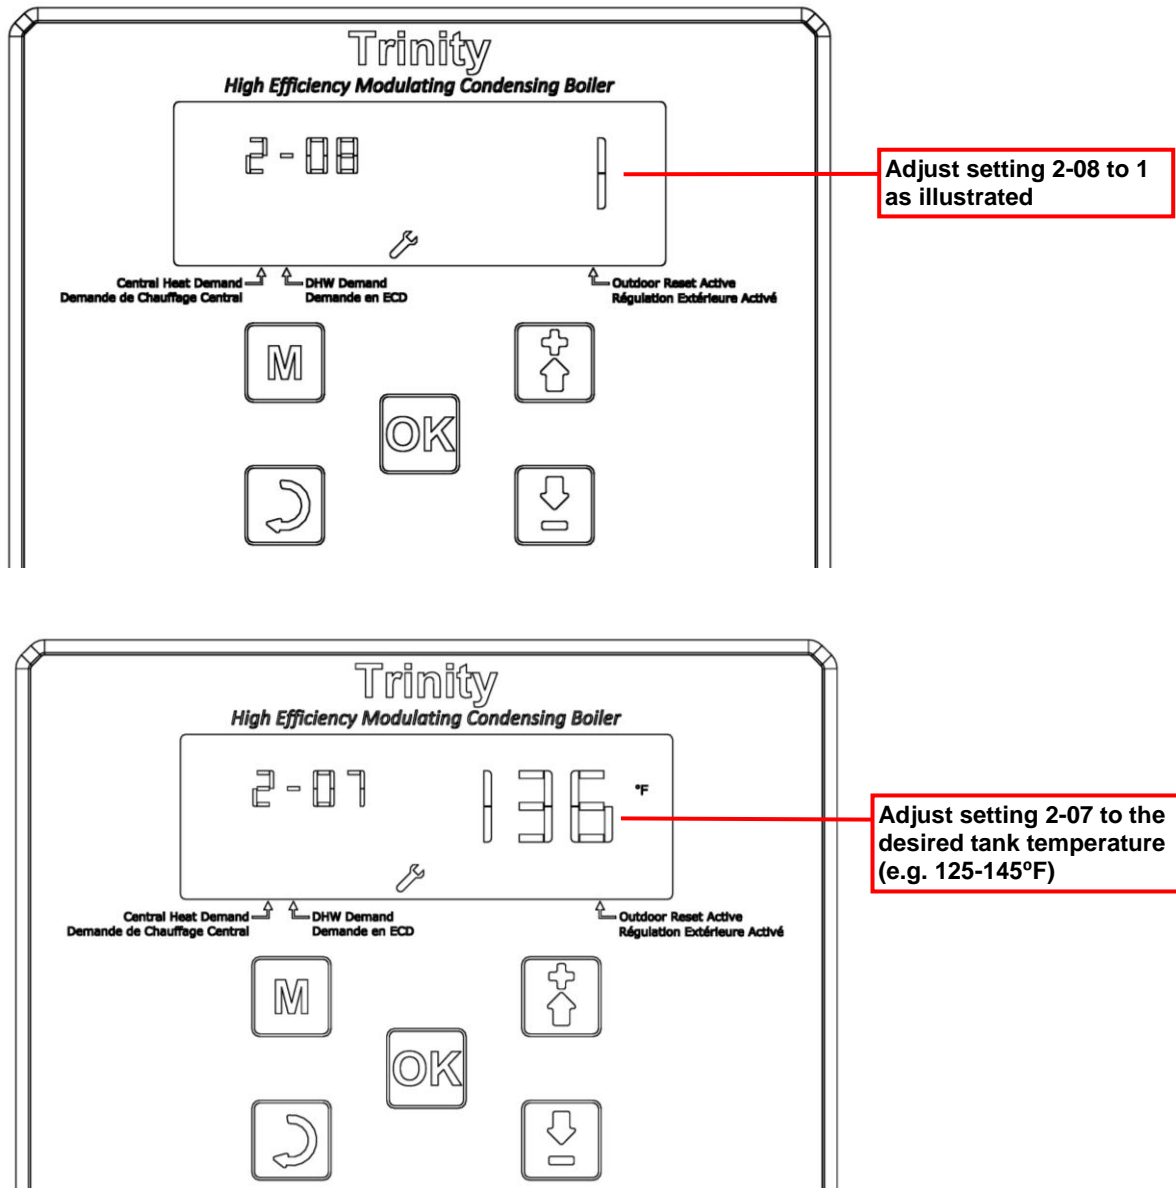

For more information on adjusting the boiler control settings, refer to: INSTALLATION AND OPERATION INSTRUCTIONS FOR TRINITY Tx BOILER included with the boiler.

4.0 START UP AND CHECK OUT

Filling the Water Heater

1. Thoroughly flush the water heater so that three (3) times the tank's volume has been drawn through it.
2. Verify water connections completed.
3. Close drain valve. Open highest hot water faucet.
4. Open cold water inlet valve and fill system.
5. Fill until a steady stream of water flows from the faucet.
6. Close the hot water faucet.
7. Ensure the boiler and domestic piping is free of leaks before proceeding to operational checklist.

Operational Checklist

1. Ensure all electrical connections are made correctly and no high voltage wires are exposed.
2. Verify the Tank Sensor is properly installed and is providing an accurate reading on the boiler display. In lieu of the Tank Sensor ensure the Thermostat is correctly signaling the boiler to operate.
3. Verify the boiler control is set to deliver the desired DHW temperature.
4. Ensure the tank is filled with water.
5. Ensure that the tank's heat exchanger coil(s) are filled with water or heat transfer fluid.
6. Ensure piping system is free of leaks and that air has been purged from system.
7. Initiate a call for domestic hot water by opening hot water taps on domestic water fixtures.
8. Verify that the boiler starts when there is a demand for hot water, and shuts down when the demand is satisfied.
9. Verify proper circulator operation and boiler flow rate during a hot water demand. Allow all heating zones to operate long enough to purge any remaining air from the system.
10. Check for proper operation of relief valve by opening it manually.
11. If T&P relief valve functions continuously during normal thermal expansion, the expansion tank may need to be upsized.

5.0 ANNUAL MAINTENANCE AND INSPECTION

Inspection Checklist

1. Perform a visual inspection of all valves, drains, and system piping for signs of leaks.

Maintenance Checklist

1. Verify maximum water temperature at hot water fixtures to verify mixing valve temperature settings.
2. Manually operate T&P relief valve by moving lever to open position until hot water is released and allow it to snap close. If closed relief valve continues to leak, close cold water inlet, drain tank, and replace relief valve.
3. If T&P relief valve functions continuously during normal thermal expansion, the expansion tank may need to be upsized.
4. Ensure that boiler and/or solar thermal system is maintained in accordance with their installation manuals.
5. Check function of field-installed controls, thermostats, and circulators.
6. Check tank PH and chloride levels to determine if water chemistry is within the specified range.
7. Any additional procedures required by local codes.

Draining the Water Heater

1. Disconnect the power supply to the heat source.
2. Close the cold water supply shut off valve.
3. Allow appliance to cool before servicing to avoid burns.
4. Open the drain valve and divert water in tank to alternate storage location or floor drain.
5. Open highest hot water faucet to allow air to enter the system.

6.0 PARTS LIST

Table 6-1 Indirect Water Heater

Item	Part #	Models	Description
1	84156	All Series (S, S-SR, SL)	Relief Valve, T&P, ¾", 150 psi
2	84632	All Series (S, S-SR, SL)	Tank Sensor
3	84158	All Series (S, S-SR, SL)	TPI Control Thermostat
4	84217	SL-35, SL-50	Coil, 35/50 Gal
5	84218	SL-70	Coil, 70 Gal
6	84219	SL Series	O-ring 6 1/4" ID for Coil
7	84220	SL Series	O-ring 6 3/4" ID for Coil



Trin & Stor parts available at any stocking wholesaler. Installers needing technical assistance can contact NTI directly at 1-800-688-2575.



NY Thermal Inc. 30 Stonegate Dr. Saint John, NB E2H 0A4 Canada
Technical Assistance: 1-800-688-2575
Website: www.ntiboilers.com
Fax: 1-506-432-1135